Maintenance planning

Maintenance chart

Change fluid						Drain fluid							
Replace						Cleaning							
Check								est					
Grease													
Maintenance action								Page no.					
Break-in period													
Grease points (Bucket)	Х							6-15					
Cab protection (ROPS and FOPS)		Х						6-15					
Tightening torques		X						6-15					
Track shoe bolt torque		Х						6-15					
Hydraulic oil return filter			Х					6-15					
Pilot line filter			X					6-15					
Swing reduction unit oil			>	Κ				6-15					
Travel reduction units oil)	Κ				6-15					
Every 10 hours													
Engine oil level		Х						6-16					
Engine coolant level		Х		floor	$oldsymbol{ol}}}}}}}}}}}}}}}$		$oldsymbol{ol}}}}}}}}}}}}}}}$	6-17					
Hydraulic oil level		Χ	J	J	J		I	6-18					
Fuel tank					Х			6-19					
Every 50 ho	urs	S											
Air conditioner filters				J		K	Ι	6-20					
Every 250 ho	our	`S											
Grease points (Bucket)	Х							6-22					
Swing reduction unit oil		Х						6-23					
Travel reduction units oil		х				Î		6-24					
Engine primary air filter					7	K		6-25					
Batteries		Х						6-28					
Hydraulic oil tank					х			6-31					
Tightening torques		х						6-32					
Track shoe bolt torque		х						6-33					
Track rollers and idler wheels		х						6-34					
Cab protection (ROPS and FOPS)		х						6-34					
Every 500 ho	our	s											
Turntable bearing	Х							6-35					
Radiator and coolers					2	K		6-38					
Every 1000 h	ou	rs											
Engine oil and filter)	Κ				6-39					
Fuel pre-filter			Х			Î		6-41					
Fuel filter			х					6-42					
DEF/AdBlue® tank vent filter			Х			Î		6-43					
Grease points (Boom and arm)	Х							6-44					
Hydraulic tank breather filter			х					6-47					
Engine air filters			х	Ī	T	T		6-48					
Hydraulic fluid analysis		Х	T	T	1	T		6-51					
Swing reduction unit oil		T)	K	Ţ	Ť		6-52					
Alternator		Х	T	1	寸	T	T	6-54					
Starter motor	П	Х	T	T	†	T	T	6-54					
Every 1500 hours													
Blow-by filter			Х	T	T	T	T	6-55					
Engine belt			Х	t	十	T	T	6-57					
Every 2000 h	ΟU	rs		İ									
Travel reduction units oil	Ñ	Ť)	Κ	T	T	T	6-58					
			- 12					j					

Change fluid					Drain fluid					
Rep	Replace						Cleaning			
Chec	Check							Te	est	
Grease										
Maintenance action									Page no.	
Hydraulic oil suction filter						Х			6-59	
Hydraulic oil return filter			Х						6-60	
Pilot line filter			Х						6-61	
Air conditioner filters			Х						6-62	
Swing reduction gear	Х								6-62	
Engine valve rocker clearance adjustment		Χ							6-62	
Every 4000 hours										
Engine coolant				Х					6-63	
DEF/AdBlue® tank suction filter						Х			6-67	
DEF/AdBlue® supply module filter			Х						6-69	
Pump outlet hoses		X							6-70	
Hydraulic hoses		X							6-70	
Every 5000 hours										
Hydraulic oil and filters				Χ					6-71	
When necessary										
Tracks - Check		Х							6-74	
Fuel tank strainer						Х			6-77	
Engine oil analisys							Χ		6-77	
Gas spring inspection		X							6-78	
Bulb replacement			Х						6-79	
Bucket teeth			Х						6-82	
Cylinders		X							6-84	
Plastic and resin parts						Х			6-84	
Air-conditioning system		Х							6-85	
DEF/AdBlue® tank drain					Х				6-87	