

6 - WORKING OPERATIONS

GENERAL INFORMATION

Installing attachments


The hydraulic coupler allows the operator to remain in the operator seat and quickly change loader arm attachments.

The hydraulic coupler switch must be used in conjunction with the one of the three hydraulic functions (held to the end of its stroke). To simplify the instructions only one of the three hydraulic functions is mentioned:


- The control lever's auxiliary switch.
- The loader arm down operation.
- The attachment curl-in operation.

NOTE: *If you have any questions about installing attachments, contact your CASE CONSTRUCTION dealer.*

1. Confirm the red markings on the indicator pins (**2**) are visible (unlock position). If the red markings are not visible, press and hold the hydraulic coupler switch (**1**) in the unlock direction. With the other hand activate and hold the control lever's auxiliary switch until the red markings are visible and fully raised.
2. Tilt the hydraulic coupler forward.

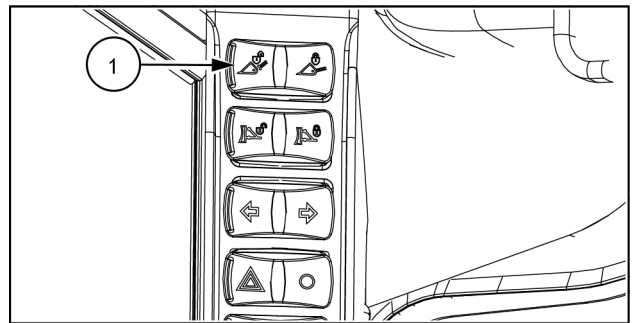

RAIL22SSL0049AA 1

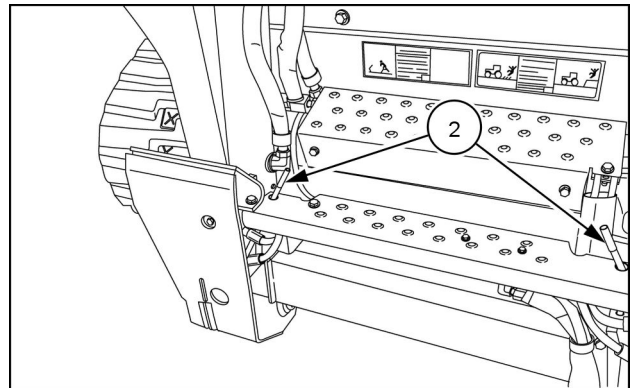

RAIL14SSL0840AA 2

3. Slowly move the machine toward the attachment until both tabs (3) on top of the coupler are underneath and in alignment with the attachment's mounting points (4).
4. Raise the loader arm enough to engage the attachment.
5. Curl the coupler back towards the machine until the attachment is completely resting on the coupler and off the ground.

NOTE: In the next step, if the indicator pins do not retract you may need to reposition the attachment on the coupler.

6. Activate the auxiliary switch on the control lever to the end of its control stroke. The indicator pins (2) on the coupler will retract into the lock position and the red markings will no longer be visible on the indicator pins.
7. Slowly raise and roll the attachment outward. Do not leave the operator seat but make a visual inspection from the cab that the hydraulic coupler's lower lock pins (1) extend fully into the attachment's lower tab slots.

8. **⚠ WARNING**

Falling object hazard!


Before operating the machine, always make sure the bucket or attachment is securely locked into the coupler. A loader bucket or attachment that is not securely locked into the coupler could come off during loader operation.

Failure to comply could result in death or serious injury.

W0947A

Make sure that the attachment is secure and safe to use. Operate the attachment through the full range of motions before you begin normal work operations.

9. If applicable, make the hydraulic and/or electrical connection from the attachment to the auxiliary hydraulic connectors. See "Auxiliary hydraulics" 6-11 or "Enhanced High Flow (EHF) auxiliary hydraulics" 6-12.

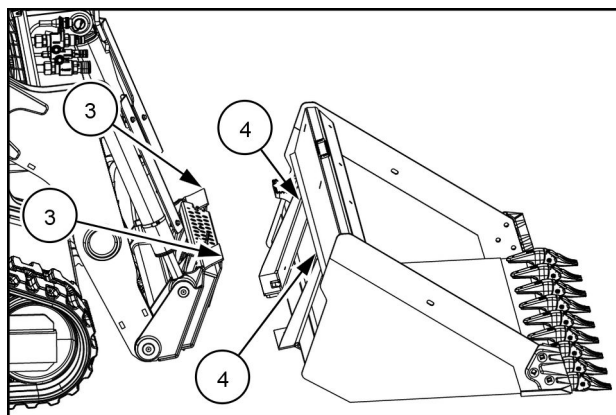

RAIL21SSL0591BA 3