

JX STRADDLE



MODELS	JX 80 STRADDLE	JX 90 STRADDLE	JX 95 STRADDLE
ENGINE			
Emissions		Tier 2	
No. of cylinders / intake	4 / natural	4 / turbocharged	4 / turbocharged
Capacity/bore x stroke (mm)	3 908 / 104 x 115	3 908 / 104 x 115	3 908 / 104 x 115
Max. engine output @ 2 500 rpm - 2000/25 CE (kW/hp)	59 / 80	66 / 89	72 / 98
Max. torque @ 1 500 rpm (Nm)	298	352	370
Fuel tank capacity (I)	77	77	77
TRANSMISSION			
Standard	12 Fwd / 12 Rev with mechanical lever		
Optional	_	_	_
Optional with creeper		12 Fwd / 12 Rev with mechanical lever	
PTO PTO			
540 rpm with proportional PTO	•	•	•
540 / 540E or 540 / 1 000 rpm with proportional PTO	0	0	0
Engine rpm: 540 rpm (rpm)	2 200	2 200	2 200
540 rpm low-consumption (rpm)	1 715	1 715	1 715
1 000 rpm (rpm)	2 380	2 380	2 380
PTO engagement	Mechanical	Mechanical	Mechanical
HYDRAULICS			
Draft control at lower arms	•	•	•
Category of rear hitch	I-II	1-11	I-II
Mechanically controlled quick lift/lower	•	•	•
Draft and floating position control	•	•	•
Main pump flow - standard (I/min)	41	41	41
Main pump flow — optional (I/min)	51.7	51.7	51.7
Direction pump flow (I/min)	26.5	26.5	26.5
Auxiliary hydraulic valves	Std: 2x Auxiliary Hyd. Valves / Optional: 3x Auxiliary Hyd. Valves		
Max. lift capacity at ball hitch (kg)	3 565	3 565	3 565
Constant lift capacity at articulation (610 mm behind ball hitch) (kg)	2 700	2 700	2 700
AXLES			
Front	2/4 drive wheels		
Rear	Reinforced right axles		
DIMENSIONS			
Total length 2WD / 4WD (mm)	3 921 / 3 865	3 921 / 3 865	4 004 / 3 948
Wheel base 2WD / 4WD (mm)	2 248 / 2 192	2 248 / 2 192	2 331 / 2 275
Overall height of ROP (mm)	2 483	2 508	2 558
Front tracking 2WD / 4WD (mm)	1 405-1 905 / 1 560-2 000	1 405-1 905 / 1 560-2 000	1 405-1 905 / 1 560-2 000
Rear tracking (mm)	1 400 / 2 000	1 400 / 2 000	1 400 / 2 000
Ground clearance at lowest point of front axle 2WD / 4WD (mm)	525 / 390	555 / 415	575 / 465
WEIGHT			
Overall weight 2WD / 4WD without ballast (kg)	2 650 / 3 080	2 650 / 3 080	2 820 / 3 250
Total permissible load (kg)	5 800	5 900	6 000

WWW.CASEIH.COM

CNH Industrial Asia, Middle East & Africa, Riva Paradiso, 14 - 6902 Paradiso-Lugano Switzerland

Safety never hurts! Always read the Operator's Manual before working with any equipment. Inspect equipment before using it, and be sure it is operating properly. Follow the product safety signs, and use any safety features provided. This literature has been published for worldwide circulation. The standard and optional equipment and the availability of individual models may vary from one country to the next. Case IH reserves the right to undertake modifications without prior notice to the design and technical equipment at all times without this resulting in any obligation whatsoever to make such modifications to units already sold. Whilst every effort is made to ensure that the specifications, descriptions and illustrations in this brochure are correct at the time of going to press, these are also subject to change without prior notice. Illustrations may show optional equipment or may not show all standard equipment. Case IH recommends AKCELA Jubricants.

