
Safety rules

General safety rules

Use caution when you operate the machine on slopes. Raised equipment, full tanks and other loads will change the center of gravity of the machine. The machine can tip or roll over when near ditches and embankments or uneven surfaces.

Never permit anyone other than the operator to ride on the machine.

Never operate the machine under the influence of alcohol or drugs, or while you are otherwise impaired.

When digging or using ground-engaging attachments, be aware of buried cables. Contact local utilities to determine the locations of services.

Pay attention to overhead power lines and hanging obstacles. High voltage lines may require significant clearance for safety.

Hydraulic oil or diesel fuel leaking under pressure can penetrate the skin, causing serious injury or infection.

- DO NOT use your hand to check for leaks. Use a piece of cardboard or paper.
- Stop the engine, remove the key, and relieve the pressure before you connect or disconnect fluid lines.
- Make sure that all components are in good condition. Tighten all connections before you start the engine or pressurize the system.
- If hydraulic fluid or diesel fuel penetrates the skin, seek medical attention immediately.
- Continuous long term contact with hydraulic fluid may cause skin cancer. Avoid long term contact and wash the skin promptly with soap and water.

Keep clear of moving parts. Loose clothing, jewelry, watches, long hair, and other loose or hanging items can become entangled in moving parts.

Wear protective equipment when appropriate.

DO NOT attempt to remove material from any part of the machine while it is being operated or while components are in motion.

Make sure that all guards and shields are in good condition and properly installed before you operate the machine. Never operate the machine with shields removed. Always close access doors or panels before you operate the machine.

Dirty or slippery steps, ladders, walkways, and platforms can cause falls. Make sure these surfaces remain clean and clear of debris.

A person or pet within the operating area of a machine can be struck or crushed by the machine or its equipment. DO NOT allow anyone to enter the work area.

Raised equipment and/or loads can fall unexpectedly and crush persons underneath. Never allow anyone to enter the area underneath raised equipment during operation.

Never operate the engine in enclosed spaces as harmful exhaust gases may build up.

Before you start the machine, be sure that all controls are in neutral or park lock position.

Start the engine only from the operator's seat. If you bypass the safety start switch, the engine can start with the transmission in gear. Do not connect or short across terminals on the starter solenoid. Attach jumper cables as described in the manual. Starting in gear may cause death or serious injury.

Always keep windows, mirrors, all lighting, Slow-Moving Vehicle (SMV) emblem and Speed Identification Symbol (SIS) clean to provide the best possible visibility while you operate the machine.

Operate controls only when seated in the operator's seat, except for those controls expressly intended for use from other locations.

Do not make any adjustments (e.g. seat, steering, light, mirror, ...) while the machine is in motion. Ensure that all adjustments are locked prior to use. Check the tightness of the securing screws and that the adjustment controls are working properly. Fitting and/or repairing the seat shall only be performed by skilled personnel.

Modifications made to this machine may increase the likelihood or potential for debris accumulations that would normally not be present. Modifications include frame-mounted attachments, plates, screens, or other aftermarket equipment. Operators of modified machines must be aware of accumulations of organic debris and/or material and overall machine cleanliness.

Modified machines require additional and more frequent inspection and cleaning during usage. The machine may require inspection and cleaning multiple times per day during usage. Operators must be aware of the operating environment and conditions. Operators must take appropriate actions to maintain the machines during use. In particular, pay attention to the following machine areas:

- In and around the engine compartment
- Hot exhaust components
- Moving, turning, or rotating machine components

Operators that operate the machine in atypical applications and/or conditions must be aware of accumulations of organic debris and/or material and overall machine cleanliness. Pay particular attention where material accumulations are possible or may result.

Machines that operate in atypical applications or conditions require additional and more frequent inspection and cleaning during usage. The machine may require inspection and cleaning multiple times per day during usage. Operators must be aware of the operating environment and conditions. Operators must take appropriate actions to maintain the machines during use. In particular, pay attention to the following machine areas:

- In and around the engine compartment
- Hot exhaust components
- Moving, turning, or rotating machine components

Before you leave the machine:

1. Park the machine on a firm, level surface.
2. Put all controls in neutral or park lock position.

General maintenance safety

Keep the area used for servicing the machine clean and dry. Clean up spilled fluids.

Service the machine on a firm, level surface.

Install guards and shields after you service the machine.

Close all access doors and install all panels after servicing the machine.

Do not attempt to clean, lubricate, clear obstructions, or make adjustments to the machine while it is in motion or while the engine is running.

Always make sure that working area is clear of tools, parts, other persons and pets before you start operating the machine.

Unsupported hydraulic cylinders can lose pressure and drop the equipment, causing a crushing hazard. Do not leave equipment in a raised position while parked or during service, unless the equipment is securely supported.

Jack or lift the machine only at jack or lift points indicated in this manual.

Incorrect towing procedures can cause accidents. When you tow a disabled machine follow the procedure in this manual. Use only rigid tow bars.

Stop the engine, remove the key, and relieve pressure before you connect or disconnect fluid lines.

Stop the engine and remove the key before you connect or disconnect electrical connections.

3. Engage the parking brake. Use wheel chocks if required.
4. Lower all hydraulic equipment — Implements, header, etc.
5. Turn off the engine and remove the key.

When, due to exceptional circumstances, you would decide to keep the engine running after you leave the operator's station, then you must follow these precautions:

1. Bring the engine to low idle speed.
2. Disengage all drive systems.

3. **WARNING**

Some components may continue to run down after you disengage drive systems.

Make sure all drive systems are fully disengaged.

Failure to comply could result in death or serious injury.

W0113A

Shift the transmission into neutral.

4. Apply the parking brake.

Scalding can result from incorrect removal of coolant caps. Cooling systems operate under pressure. Hot coolant can spray out if you remove a cap while the system is hot. Allow the system to cool before you remove the cap. When you remove the cap, turn it slowly to allow pressure to escape before you completely remove the cap.

Replace damaged or worn tubes, hoses, electrical wiring, etc.

The engine, transmission, exhaust components, and hydraulic lines may become hot during operation. Take care when you service such components. Allow surfaces to cool before you handle or disconnect hot components. Wear protective equipment when appropriate.

When welding, follow the instructions in the manual. Always disconnect the battery before you weld on the machine. Always wash your hands after you handle battery components.

Do not climb on the machine. Do not use the attachment as a ladder, or platform for working at heights. Use appropriate means according to national/local safety rules (for example, an individual rolling platform, etc.) to access the areas of the machine not reachable from the ground level.

Always use the machine's locking devices to prevent any unintentional movements of the machine (mounted or towed) or parts of it that may occur while roading or servicing (unfold, swing out, or other). Read and follow all related instructions in the manual provided by the machine manufacturer.

Wheels and tires

Make sure that tires are correctly inflated. Do not exceed any recommended load or pressure. Follow the instructions in the manual for proper tire inflation.

Tires are heavy. Handling tires without proper equipment could cause death or serious injury.

Never weld on a wheel with a tire installed. Always remove the tire completely from the wheel prior to welding.

Always have a qualified tire technician service the tires and wheels. If a tire has lost all pressure, take the tire and wheel to a tire shop or your dealer for service. Explosive separation of the tire can cause serious injury.

DO NOT weld to a wheel or rim until the tire is completely removed. Inflated tires can generate a gas mixture with the air that can be ignited by high temperatures from welding procedures performed on the wheel or rim. Removing the air or loosening the tire on the rim (breaking the bead) will NOT eliminate the hazard. This condition can exist whether tires are inflated or deflated. The tire **MUST** be completely removed from the wheel or rim prior to welding the wheel or rim.

Install stalk stompers, stubble mats, or other devices to prevent tire damage when:

- working on harvested fields with rough stubble
- working on harvested fields in dry conditions, when the stubble is harder and tougher

Driving on public roads and general transportation safety

Comply with local laws and regulations.

Use appropriate lighting to meet local regulations.

Make sure that the SMV emblem and Speed Identification Symbol (SIS) are visible.

Make sure that the brake pedal latch is engaged. You must lock brake pedals together for road travel.

Use safety chains for trailed equipment when safety chains are provided with machine or equipment.

Lift implements and attachments high enough above ground to prevent accidental contact with road.

When you transport equipment or a machine on a transport trailer, make sure that it is properly secured. Be sure the SMV and SIS on the equipment or machine are covered while being transported on a trailer.

Be aware of overhead structures or power lines and make sure that the machine and/or attachments can pass safely under.

Travel speed should be such that you maintain complete control and machine stability at all times.

Slow down and signal before turning.

Pull over to allow faster traffic to pass.

Follow correct towing procedure for equipment with or without brakes.

Always use the Hydraulic Master switch to disable the hitch and remote valve controls before roading.

Always use the machine's locking devices to prevent any unintentional movements of the machine (mounted or towed) or parts of it that may occur while roading or servicing (unfold, swing out, or other). Read and follow all related instructions in the manual provided by the machine manufacturer.

Fire and explosion prevention

Fuel or oil that is leaked or spilled on hot surfaces or electrical components can cause a fire.

Crop materials, trash, debris, bird nests, or flammable material can ignite on hot surfaces.

Always have a fire extinguisher on or near the machine.

Make sure that the fire extinguisher(s) is maintained and serviced according to the manufacturer's instructions.

At least once each day and at the end of the day, remove all trash and debris from the machine especially around hot components such as the engine, transmission, exhaust, battery, etc. More frequent cleaning of your ma-

chine may be necessary depending on the operating environment and conditions.

At least once each day, remove debris accumulation around moving components such as bearings, pulleys, belts, gears, cleaning fans, etc. More frequent cleaning of your machine may be necessary depending on the operating environment and conditions.

Inspect the electrical system for loose connections and frayed insulation. Repair or replace loose or damaged parts.

Do not store oily rags or other flammable material on the machine.

Do not weld or flame cut any items that contain flammable material. Clean items thoroughly with non-flammable solvents before welding or flame-cutting.

Do not expose the machine to flames, burning brush, or explosives.

Promptly investigate any unusual smells or odors that may occur during operation of the machine.

General battery safety

Always wear eye protection when you work with batteries.

Do not create sparks or have open flame near a battery.

Ventilate the area when you charge a battery or use a battery in an enclosed area.

Disconnect the negative (-) terminal first and reconnect the negative (-) terminal last.

When you weld on the machine, disconnect both terminals of the battery.

Do not weld, grind, or smoke near a battery.

When you use auxiliary batteries or connect jumper cables to start the engine, use the procedure shown in the operator's manual. Do not short across terminals.

Follow the manufacturer's instructions when you store and handle batteries.

Battery post, terminals, and related accessories contain lead and lead compounds. Wash hands after handling.

Battery acid causes burns. Batteries contain sulfuric acid. Avoid contact with skin, eyes, or clothing. Antidote (external): Flush with water. Antidote (eyes): flush with water for 15 minutes and seek medical attention immediately. Antidote (internal): Drink large quantities of water or milk. Do not induce vomiting. Seek medical attention immediately.

Keep out of reach of children and other unauthorized persons.

Passenger seat safety

Use on public roads:

- The passenger seat can be used for short term and occasional transport of only one person from the farm to the field.

Use on the field:

- It is allowed to use the passenger seat for only one person when training a new operator or when a service technician is diagnosing a mechanical problem.

When the passenger seat is occupied, the following precautions must be followed:

- Tractor should be driven only at slow speeds and over level ground.
- Avoid quick starts and stops.
- Avoid sharp turns.
- Always wear correctly adjusted seat belts.
- Keep doors closed at all times.

Operator presence system

Your machine is equipped with an operator presence system to prevent the use of some features while the operator is not in the operator's seat.

Never disconnect or bypass the operator presence system.

If the operator presence system is inoperable, then it must be repaired.

Power Take-Off (PTO)

PTO-driven machinery can cause death or serious injury. Before you work on or near the PTO shaft or service or clear the driven machine, put the PTO lever in the disengage position, stop the engine, and remove the key.

Whenever a PTO is in operation, a guard must be in place to prevent death or injury to the operator or bystanders.

When doing stationary PTO work, keep clear of all moving parts and make sure that appropriate guards are in place.

Reflectors and warning lights

You must use flashing amber warning lights, according to national/local safety rules, when you operate equipment on public roads.

Seat belts

Seat belts must be worn at all times.

Seat belt inspection and maintenance:

- Keep seat belts in good condition.
- Keep sharp edges and items that can cause damage away from the belts.
- Periodically check belts, buckles, retractors, tethers, slack take-up system, and mounting bolts for damage and wear.
- Replace all parts that have damage or wear.
- Replace belts that have cuts that can make the belt weak.
- Check that bolts are tight on the seat bracket or mounting.
- If the belt is attached to the seat, make sure that the seat or seat brackets are mounted securely.
- Keep seat belts clean and dry.
- Clean belts only with soap solution and warm water.
- Do not use bleach or dye on the belts because this can make the belts weak.

Operator protective structure

Your machine is equipped with an operator protective structure, such as: a Roll Over Protective Structure (ROPS), Falling Objects Protective Structure (FOPS), or a cab with a ROPS. A ROPS may be a can frame or a two-posted or four-posted structure used for the protection of the operator to minimize the possibility of serious injury. The mounting structure and fasteners forming the mounting connection with the machine are part of the ROPS.

The protective structure is a special safety component of your machine.

DO NOT attach any device to the protective structure for pulling purposes. DO NOT drill holes to the protective structure.

The protective structure and interconnecting components are a certified system. Any damage, fire, corrosion, or modification will weaken the structure and reduce your protection. If this occurs, THE PROTECTIVE STRUCTURE MUST BE REPLACED so that it will provide the same protection as a new protective structure. Contact your dealer for protective structure inspection and replacement.

After an accident, fire, tip over, or roll over, the following MUST be performed by a qualified technician before returning the machine to field or job-site operations:

- The protective structure MUST BE REPLACED.
- The mounting or suspension for the protective structure, operator's seat and suspension, seat belts and mounting components, and wiring within the operator's protective system MUST be carefully inspected for damage.
- All damaged parts MUST BE REPLACED.

DO NOT WELD, DRILL HOLES, ATTEMPT TO STRAIGHTEN, OR REPAIR THE PROTECTIVE STRUCTURE. MODIFICATION IN ANY WAY CAN REDUCE THE STRUCTURAL INTEGRITY OF THE STRUCTURE, WHICH COULD CAUSE DEATH OR SERIOUS INJURY IN THE EVENT OF FIRE, TIP OVER, ROLL OVER, COLLISION, OR ACCIDENT.

Seat belts are part of your protective system and must be worn at all times. The operator must be held to the seat inside the frame in order for the protective system to work.

Air-conditioning system

The air-conditioning system is under high pressure. Do not disconnect any lines. The release of high pressure can cause serious injury.

The air-conditioning system contains gases that are harmful to the environment when released into the atmosphere. Do not attempt to service or repair the system.

Only trained service technicians can service, repair, or recharge the air-conditioning system.

Personal Protective Equipment (PPE)

Wear Personal Protective Equipment (PPE) such as hard hat, eye protection, heavy gloves, hearing protection, protective clothing, etc.

Do Not Operate tag

Before you start servicing the machine, attach a 'Do Not Operate' warning tag to the machine in an area that will be visible.

Hazardous chemicals

If you are exposed to or come in contact with hazardous chemicals you can be seriously injured. The fluids, lubricants, paints, adhesives, coolant, etc. required for the function of your machine can be hazardous. They may be attractive and harmful to domestic animals as well as humans.

Material Safety Data Sheets (MSDS) provide information about the chemical substances within a product, safe handling and storage procedures, first aid measures, and procedures to take in the event of a spill or accidental release. MSDS are available from your dealer.

Before you service your machine check the MSDS for each lubricant, fluid, etc. used in this machine. This information indicates the associated risks and will help you service the machine safely. Follow the information in the

MSDS, and on manufacturer containers, as well as the information in this manual, when you service the machine.

Dispose of all fluids, filters, and containers in an environmentally safe manner according to local laws and regulations. Check with local environmental and recycling centers or your dealer for correct disposal information.

Store fluids and filters in accordance with local laws and regulations. Use only appropriate containers for the storage of chemicals or petrochemical substances.

Keep out of reach of children or other unauthorized persons.

Applied chemicals require additional precautions. Obtain complete information from the manufacturer or distributor of the chemicals before you use them.

Utility safety

When digging or using ground-engaging equipment, be aware of buried cables and other services. Contact your local utilities or authorities, as appropriate, to determine the locations of services.

Make sure that the machine has sufficient clearance to pass in all directions. Pay special attention to overhead power lines and hanging obstacles. High voltage lines may require significant clearance for safety. Contact local authorities or utilities to obtain safe clearance distances from high voltage power lines.

Retract raised or extended components, if necessary. Remove or lower radio antennas or other accessories. Should a contact between the machine and an electric

power source occur, the following precautions must be taken:

- Stop the machine movement immediately.
- Apply the parking brake, stop the engine, and remove the key.
- Check if you can safely leave the cab or your actual position without contact with electrical wires. If not, stay in your position and call for help. If you can leave your position without touching lines, jump clear of the machine to make sure that you do not make contact with the ground and the machine at the same time.
- Do not permit anyone to touch the machine until power has been shut off to the power lines.

Electrical storm safety

Do not operate machine during an electrical storm.

If you are on the ground during an electrical storm, stay away from machinery and equipment. Seek shelter in a permanent, protected structure.

If an electrical storm should strike during operation, remain in the cab. Do not leave the cab or operator's platform. Do not make contact with the ground or objects outside the machine.

Mounting and dismounting

Mount and dismount the machine only at designated locations that have handholds, steps, and/or ladders.

Do not jump off of the machine.

Make sure that steps, ladders, and platforms remain clean and clear of debris and foreign substances. Injury may result from slippery surfaces.

Face the machine when you mount and dismount the machine.

Maintain a three-point contact with steps, ladders, and handholds.

Never mount or dismount from a moving machine.

Working at heights

When tractor maintenance requires you to work at heights:

- Correctly use tractor steps, ladders, and/or hand holds.
- Do not stand on tractor areas that are not designed as steps or platforms.
- When necessary, use appropriate means according to national/local safety rules (for example, an individual

Do not use the steering wheel or other controls or accessories as handholds when you enter or exit the cab or operator's platform.

rolling platform, etc.) to reach components such as mirrors, rotating beacons, air filters, GPS receivers, or other components not reachable from the ground.

- Never use steps, ladders, and/or hand holds when the tractor is in motion.

Do not use the tractor as a lift, ladder, or platform for working at heights.

Lifting and overhead loads

Never use loader buckets, forks, etc. or other lifting, handling, or digging equipment to lift persons.

Do not use raised equipment as a work platform.

Know the full area of movement of the machine and equipment and do not enter or permit anyone to enter the area of movement while the machine is in operation.

Never enter or permit anyone to enter the area underneath raised equipment. Equipment and/or loads can fall unexpectedly and crush persons underneath it.

Do not leave equipment in raised position while parked or during service, unless securely supported. Hydraulic cylinders must be mechanically locked or supported if they are left in a raised position for service or access.

Loader buckets, forks, etc. or other lifting, handling, or digging equipment and its load will change the center of gravity of the machine. This can cause the machine to tip on slopes or uneven ground.

Load items can fall off the loader bucket or lifting equipment and crush the operator. Care must be taken when lifting a load. Use proper lifting equipment.

Do not lift load higher than necessary. Lower loads to transport. Remember to leave appropriate clearance to the ground and other obstacles.

Equipment and associated loads can block visibility and cause an accident. Do not operate with insufficient visibility.

Remote valve controls

⚠ WARNING

Moving parts!

Always use the Hydraulic Master switch to disable the hitch and remote valve controls before loading. Failure to comply could result in death or serious injury.

W1587A

⚠ WARNING

Unexpected machine movement!

Always use the machine's locking devices to prevent any unintentional movements of the machine (mounted or towed) or parts of it that may occur while loading or servicing (unfold, swing out, or other). Read and follow all related instructions in the manual provided by the machine manufacturer. Failure to comply could result in death or serious injury.

W1789A

Remote levers

Located at the front of the armrest console, individual remote levers for up to six remote valves offer precise flow control.



Neutral – The lever returns to the center, neutral position when released, except when it is in float position.



Extend (Raise) – Move the lever rearward to provide proportional flow to extend the cylinder. Flow is proportional to lever movement and the flow setting for the selected remote valve. Flow stops when the lever is released.




When a timer is active, if a lever is moved to the soft detent extend position and then released, flow continues until the timer expires or the lever is moved out of neutral.

Retract (Lower) – Move the lever forward to provide proportional flow to retract the cylinder. Flow is proportional to lever movement and the flow setting for the selected remote valve. Flow stops when the lever is released.




When a timer is active, if a lever is moved to the soft detent retract position and then released, flow continues until the timer expires or the lever is moved out of neutral.

Float – Move the lever fully forward to engage the float detent position. The valve remains in float position until moved the lever is moved back to the Neutral position. Float allows a hydraulic cylinder to extend or retract freely, allowing equipment such as scraper blades or markers to follow the ground contour.

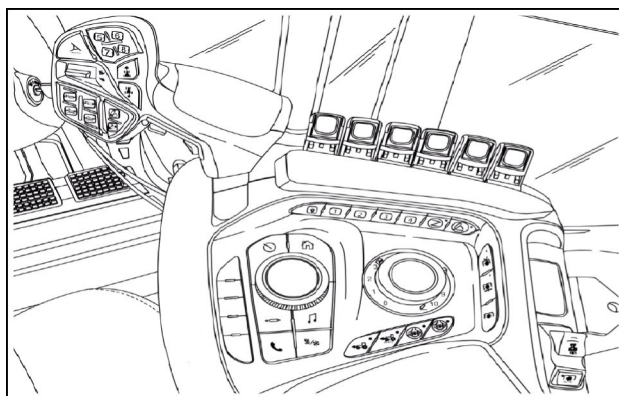

SVIL23TR01462AA 1

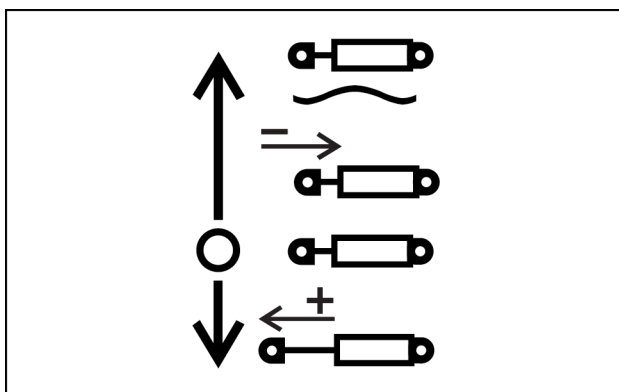

RAIL19TR01309AA 2

The Remotes screen on the display provides individual controls for each remote valve:

- for setting extend target flow and retract target flow by percentage of available flow,
- for setting the extend and retract timers from **0 – 60 s** or to infinite
- for separate learning modes for both the extend and retract timers,
- and ON/Off controls for Lock, Timer and Motor Mode functions.

 
 Press the remote valve button on the primary navigation panel to access the setup screen for the front and rear remote valves.

Remote levers are color-coded and backlit for easy identification. The label on the remote coupler for the valves color coordinates with its control lever.

NOTE: *An unassigned lever is not illuminated.*

A default lever layout is provided but the operator can change that layout at any time.


 Press the setup access button at the front of the armrest center panel for access to the screen for pairing remote levers with remote valves.

Swatch	Color name	Default pairing
	Tomato red	R1
	Signal blue	R2
	Sulfur yellow	R3
	Emerald green	R4
	Dahlia yellow	R5
	Signal white	F1
	Tele magenta	F2
	Sky blue	Isobus

To prevent accidental engagement, a remote lever can be physically locked.

Slide the tab downward with your thumb and forefinger to lock the lever. An additional light bar appears on top of the lever to indicate its locked state.

Slide the tab upward to release the lever.

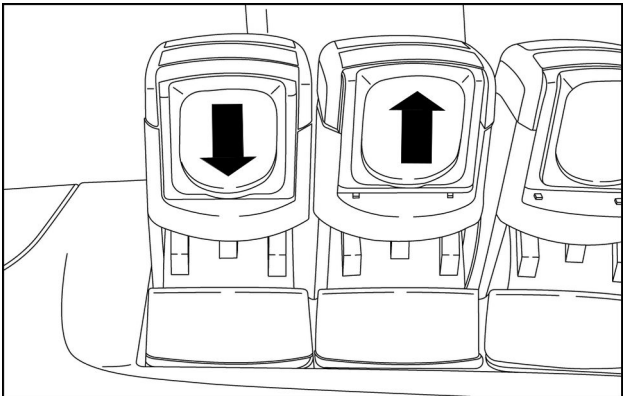


RAIL19TR00300AA 3

Flow controls

Located in the armrest compartment, two flow control knobs offer quick tools:

1. to select a remote valve (1-8) for flow rate adjustment,
2. to select the extend or retract circuit for adjustment:
 - Press down on the knob to toggle between the extend and retract circuit.
 - If flow is active, the default is the direction of flow. If flow is not active, the default selection is retract.
3. to adjust the flow rate for the selected circuit:
 - Turn the knob counter clockwise to decrease flow to the circuit.
 - Turn the knob clockwise to increase flow to the circuit.

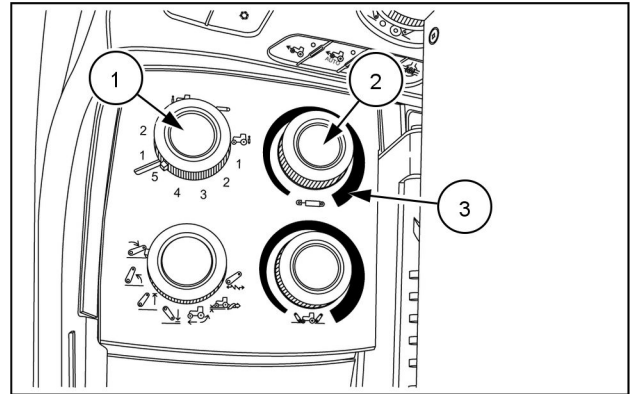

SVIL21TR00017AA 4

A message briefly displays to confirm the selected valve, direction of flow and flow rate, whenever a control is used.

Go to Chapter 6 for more complete information on remote valve controls.

Multifunction Handle

⚠ WARNING

Moving parts!

Always use the Hydraulic Master switch to disable the hitch and remote valve controls before roading.
Failure to comply could result in death or serious injury.

W1587A

⚠ WARNING

Unexpected machine movement!

Always use the machine's locking devices to prevent any unintentional movements of the machine (mounted or towed) or parts of it that may occur while roading or servicing (unfold, swing out, or other). Read and follow all related instructions in the manual provided by the machine manufacturer.
Failure to comply could result in death or serious injury.

W1789A

⚠ WARNING

Avoid injury!

When you release the foot throttle, the engine speed will lower to the level set by the hand throttle.
When you use the foot throttle, place the hand throttle control lever in the idle speed position. Only use the foot throttle when you drive the tractor on a road.
Failure to comply could result in death or serious injury.


W1624A

The Multifunction Handle is the hand throttle used to control engine speed

- To increase engine speed, move the handle forward.
- To decrease engine speed, move the handle rearward.

In Automatic Productivity Management (APM) mode, the hand throttle commands ground speed.

- To increase ground speed, move the handle forward.
- To decrease ground speed, move the handle rearward.

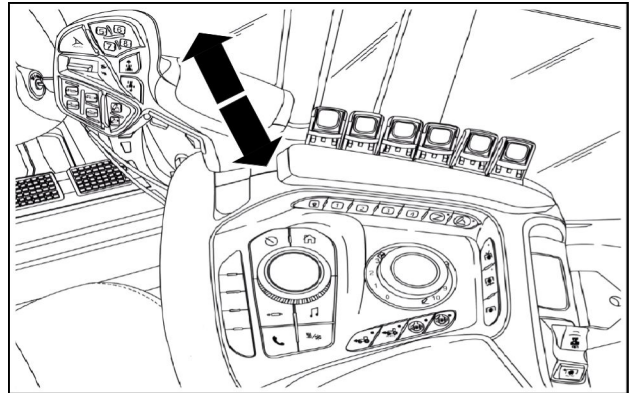

SVIL23TR01462AA 1

Multifunction Handle controls

The Multifunction Handle permits one handed operation of key controls. These functions are briefly explained here and described in more detail as you read through the manual.

Configurable buttons

5

The operator assigns a function to the button using the button configuration screen on the display.

6


If a function is assigned, pressing the button commands the function.

7

If a function is not assigned, pressing the button displays the button configuration screen.

8

Button assignments may be changed as required.

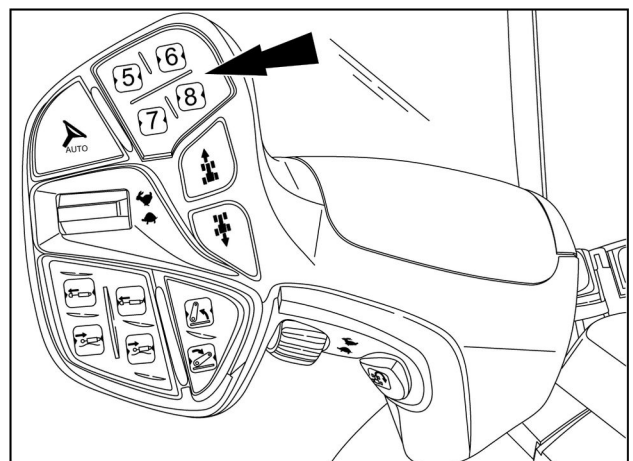

RAIL18TR00398BA 2


Shuttle shift buttons



Press the forward shuttle shift button to command forward travel. Press and hold the button for anti jack knife braking when traveling in forward direction. Anti jack knife braking commands the transmission to maintain ground speed as the trailer brakes are applied, maintaining control of the towed load.



Press the reverse shuttle shift button to command reverse travel. Press and hold the button for anti jack knife braking when traveling in reverse direction. Anti jack knife braking commands the transmission to maintain ground speed as the trailer brakes are applied, maintaining control of the towed load.

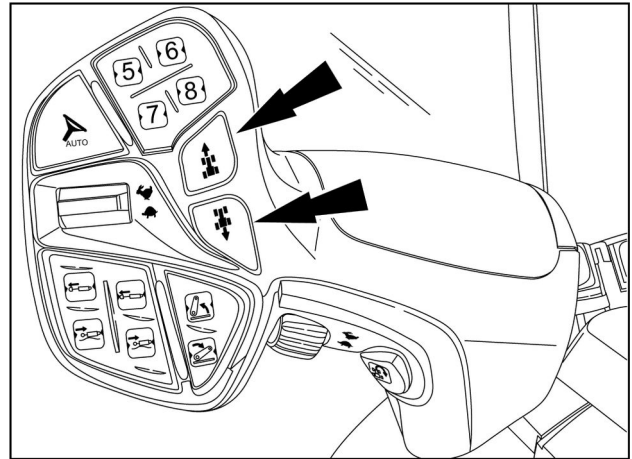

RAIL18TR00398BA 3

NOTE: Initial drive direction must always be selected using the transmission control lever. Subsequent direction changes may be made with the buttons on the Multifunction Handle.


Autoguidance engage



Press the autoguidance button to engage automatic steering if all the conditions for engagement are met. This also applies for automatic steering over ISOBUS.

Turn the steering wheel to disengage automatic steering. Pressing the button again does not disengage automatic steering.

NOTE: Once the safety message has been read and accepted by the operator on the display, the operator can engage autoguidance with this button. Autoguidance can always be disengaged by turning the steering wheel.

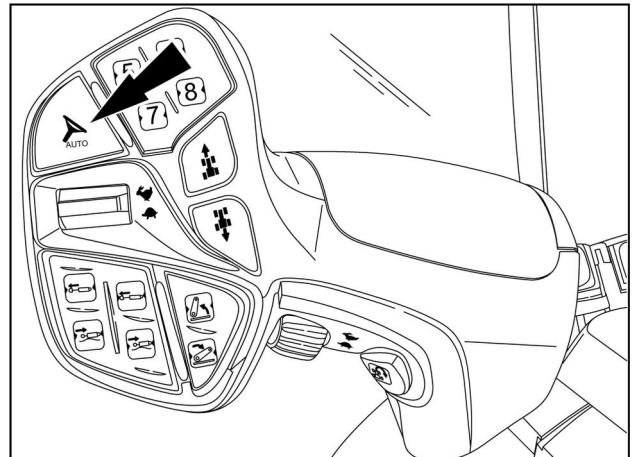

RAIL18TR00398BA 4


Gear selector



Press the switch upward to shift the transmission to the next higher gear. Press and hold to shift up one gear per second or as fast as conditions permit..



Press the switch downward to shift the transmission to the next lower gear. Press and hold to shift down one gear per second or as fast as conditions permit.

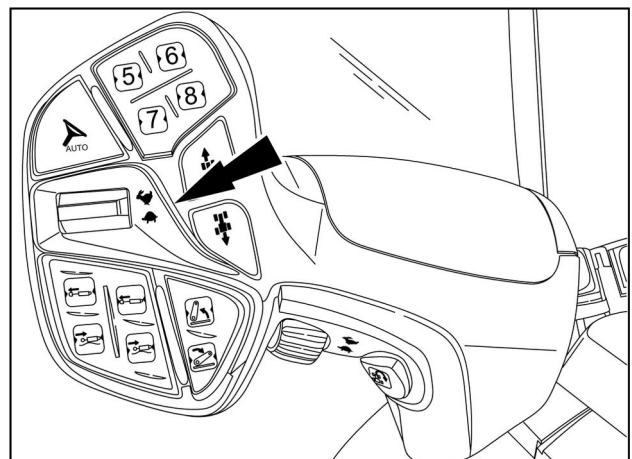

RAIL18TR00398BA 5

Remote valve buttons



The left-hand extend button starts an extend timer if enabled or extend flow as long as the button is held. First remote is the default, user-selectable.




The left-hand retract button starts a retract timer if enabled or retract flow as long as the button is held. Press with the second function button to command float. First remote is the default, user-selectable



The right-hand extend button starts an extend timer if enabled or extend flow as long as the button is held. Second remote (or fifth remote, if fitted) is the default, user-selectable.



The right-hand retract button starts a retract timer if enabled or retract flow as long as the button is held. Press with the second function button to command float. Second remote (or fifth remote, if fitted) is the default, user-selectable

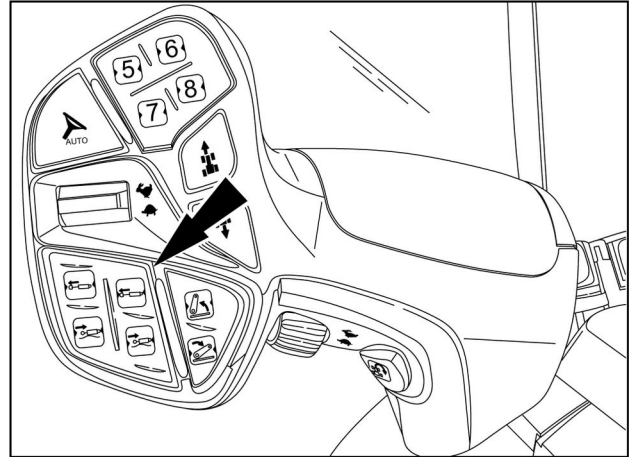

RAIL18TR00398BA 6


Hitch express buttons



Press the hitch express raise button to raise the rear hitch to the upper limit. Hold the second function button while pressing to command the front hitch.



Press the hitch express lower button to lower the rear hitch to working depth. Hold the second function button while pressing to command the front hitch.

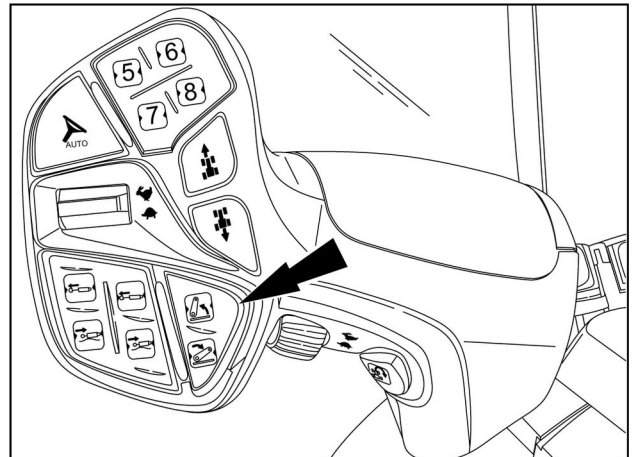


RAIL18TR00398BA 7

Thumb wheel



In Automatic Productivity Management (APM) field, rotate the thumb wheel to adjust the maximum speed set point.

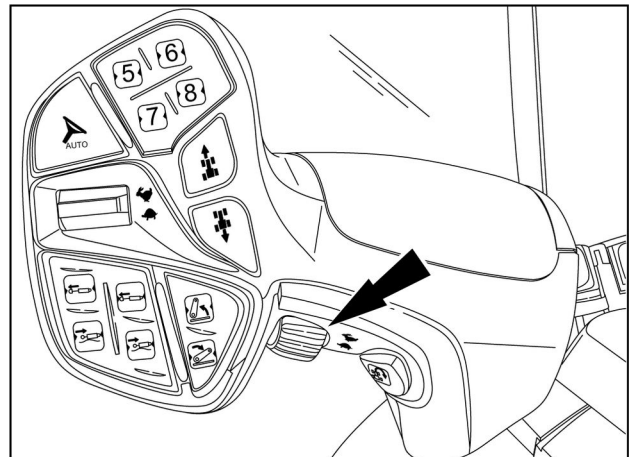

RAIL18TR00398BA 8


Headland Management Control (HMC)



Press the HMC II step button to advance to the next step in current headland sequence.

NOTE: The sequence must be started with the HMC II display screen or the playback function can be assigned to a user defined button.

When no HMC II sequence is active the button switches between CSM 1 and CSM 2, see page **Engine speed controls (55.525)**.

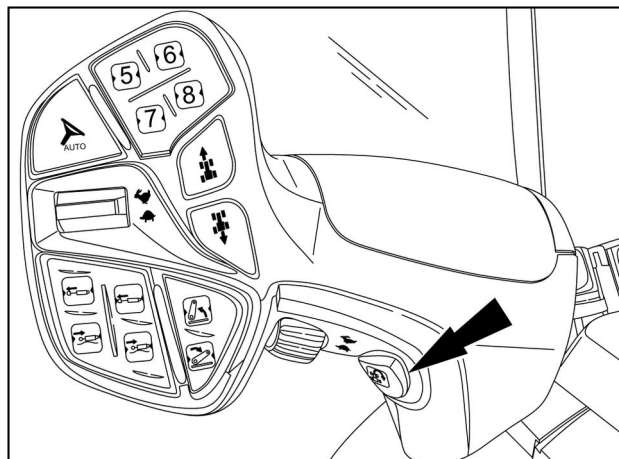


RAIL18TR00398BA 9

Second function button

The second function button is located on the side of the Multifunction Handle facing the windshield.

The second function button is used to extend the functionality of another button. For example, press the second function button with the hitch express raise or lower button to command the front hitch rather than the rear hitch.

The second function button is also used to start calibration procedures, see pages **Overview** and the following, or to activate ISOBus automation, see **ISOBUS automation and Tractor Implement Management (TIM) activation (55.905)**.

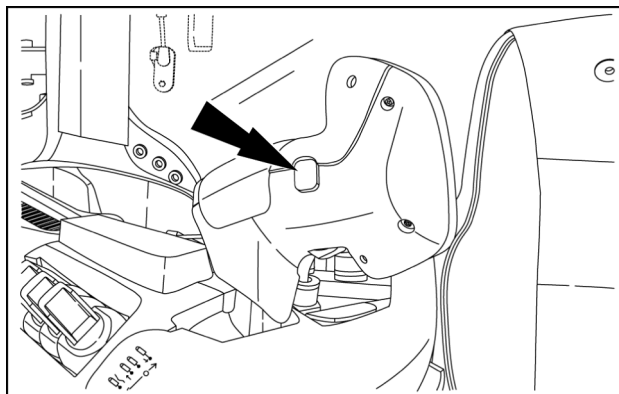

SVIL23TR00872AA 10

Joystick (where fitted)

⚠ WARNING

Moving parts!

Always use the Hydraulic Master switch to disable the hitch and remote valve controls before loading. Failure to comply could result in death or serious injury.

W1587A

⚠ WARNING

Unexpected machine movement!

Always use the machine's locking devices to prevent any unintentional movements of the machine (mounted or towed) or parts of it that may occur while loading or servicing (unfold, swing out, or other). Read and follow all related instructions in the manual provided by the machine manufacturer. Failure to comply could result in death or serious injury.

W1789A

What the joystick controls depends:

- on how many front and rear remote valves are available,
- on how the joystick is configured,
- and on whether the tractor is equipped with a front hitch or front loader

 
The front hitch option requires either a front or rear remote valve. Typically, front valve 1 is assigned to front hitch operation. Two additional front remote valves are optionally available for other front mounted equipment functions.

The front end loader option requires the joystick and minimum of five remote valves on the tractor.

The functions are assigned to the various remote valves with the armrest configuration screen on the display.



Press the setup access button for quick access to the joystick setup screen.




The joystick controls up to six separate remote valves:


- a remote on the y-axis,
- a remote on the x-axis,
- a remote on the y-axis with the second function button (1) pressed,
- a remote on the x-axis with the second function button (1) pressed,

NOTE: Press the second function button and then move the joystick out of the neutral to engage the second function. Release the button and the second function remains active until the joystick is returned to neutral.

NOTE: The x- or y-axis with the second function button can be configured to "rattle" the bucket and assist emptying. Flow pulses between 50% extend and retract to approximate wiggling the joystick back and forth rapidly.

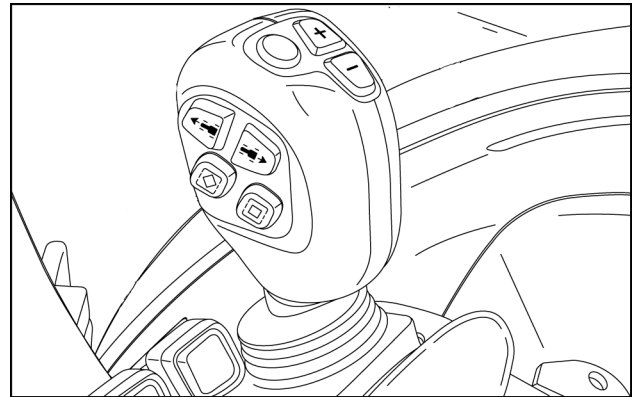


RAIL18TR01128AB 1

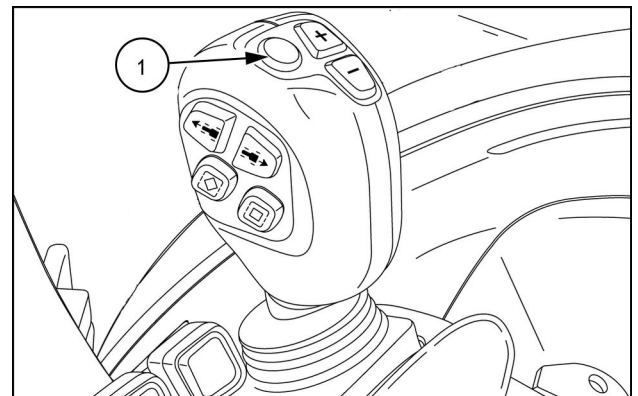


RAIL18TR01128AB 2

- a remote with the front rocker switch **(2)**,
- and a remote with the front rocker switch **(2)** and the second function button pressed.

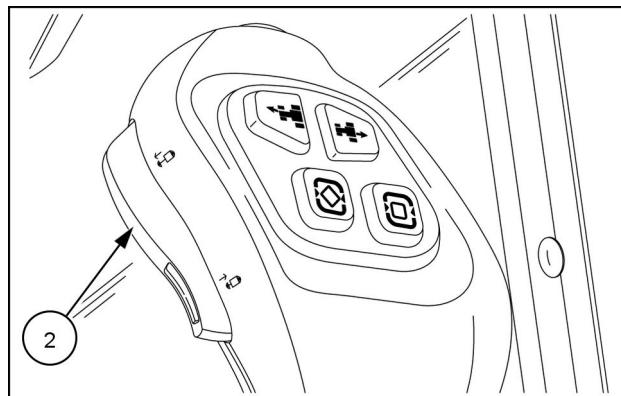


RAIL19TR00620AA 3

 The joystick returns to the center, neutral position when released, except when it is in float position.



Extend (Raise) – Move the joystick to provide proportional flow to extend the cylinder. Flow is proportional to joystick movement and the flow setting for the selected remote valve. Flow stops when the joystick is released.

When a timer is active, if the joystick is moved to the extend detent position and then released, flow continues until the timer expires or the joystick is moved out of neutral.

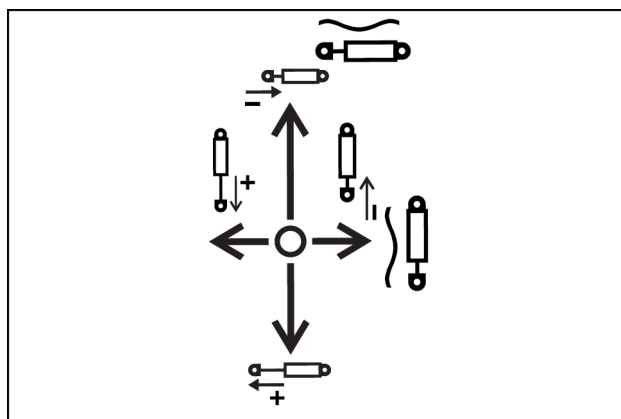

RAIL19TR00623AA 4



Retract (Lower) – Move the joystick to provide proportional flow to retract the cylinder. Flow is proportional to joystick movement and the flow setting for the selected remote valve. Flow stops when the joystick is released.

When a timer is active, if the joystick is moved to the retract detent position and then released, flow continues until the timer expires or the joystick is moved out of neutral.



Float – Move the joystick to engage the float detent position. The valve remains in float position until the joystick is moved to the neutral position. Float allows a hydraulic cylinder to extend or retract freely, allowing equipment to follow the ground contour.

NOTE: With a rear hitch function assigned to a joystick control, the Float detent position commands Fast Dig. See **Rear hitch controls (37.110)** for more information on the rear hitch controls.

The joysticks shares some buttons with the multi function handle. Buttons with the same or similar icon function exactly the same between the two controls.


Shuttle shift buttons



Press the forward shuttle shift button to command forward travel. Press and hold the button for anti jack knife braking when traveling in forward direction. Anti jack knife braking commands the transmission to maintain ground speed as the trailer brakes are applied, maintaining control of the towed load.



Press the reverse shuttle shift button to command reverse travel. Press and hold the button for anti jack knife braking when traveling in reverse direction. Anti jack knife braking commands the transmission to maintain ground speed as the trailer brakes are applied, maintaining control of the towed load.

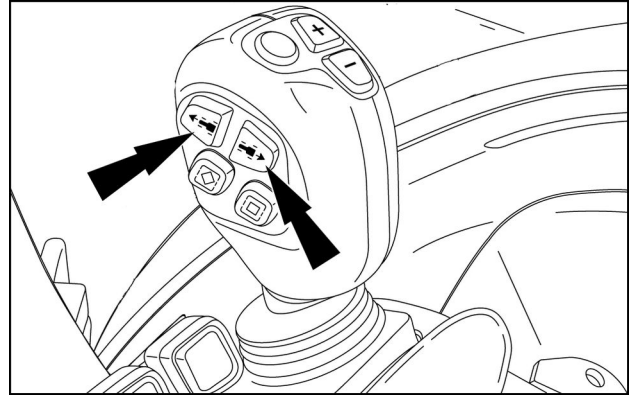

RAIL18TR01128AB 5

Configurable buttons




The operator assigns a function to the button using the button configuration screen on the display.

If a function is assigned, pressing the button commands the function.



If a function is not assigned, pressing the button displays the button configuration screen.

Button assignments may be changed as required.

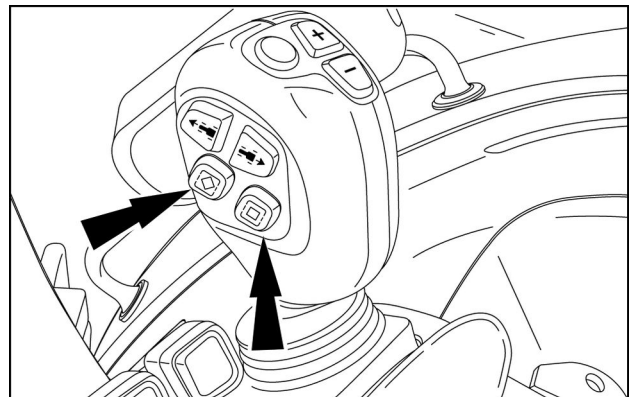

RAIL18TR01128AA 6


Gear selector



Press the plus button to select the next higher gear for the transmission.



Press the minus button to select the next lower gear for the transmission.

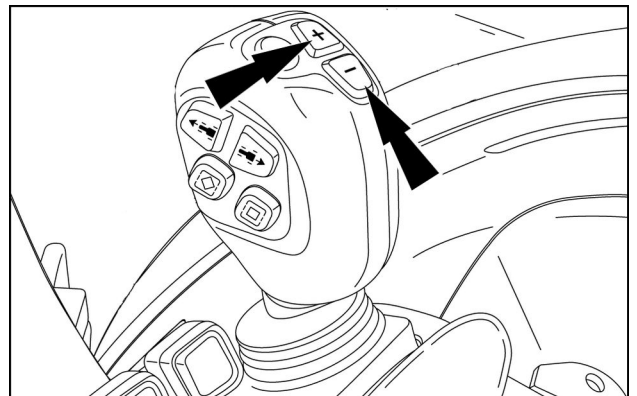

RAIL18TR01128AB 7

Center armrest controls

Configurable buttons and hitch inching controls

⚠ WARNING

Moving parts!

Always use the Hydraulic Master switch to disable the hitch and remote valve controls before roading.

Failure to comply could result in death or serious injury.

W1587A


⚠ WARNING

Unexpected machine movement!

Always use the machine's locking devices to prevent any unintentional movements of the machine (mounted or towed) or parts of it that may occur while roading or servicing (unfold, swing out, or other). Read and follow all related instructions in the manual provided by the machine manufacturer.

Failure to comply could result in death or serious injury.

W1789A

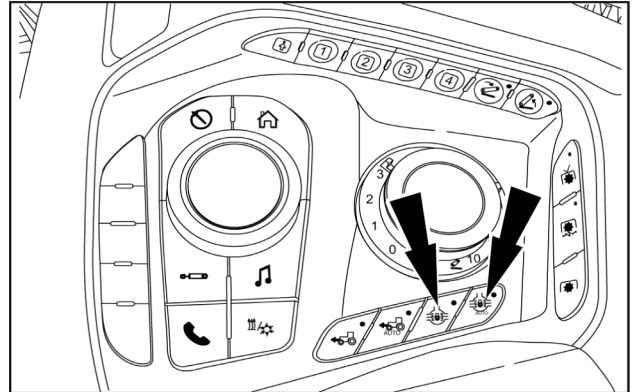

SVIL23TR01471PA 1

Press the setup access button for quick access to the setup screens:

- for pairing a remote lever with a remote valve,



- for assigning remote valves to the extend/retract buttons on the multi-function handle,
- for assigning functions to the nine configurable buttons, or
- for assigning remote valves to the joystick controls.



The operator assigns a function to the button using the button configuration screen on the display.



If a function is assigned, pressing the button commands the function.



If a function is not assigned, pressing the button displays the button configuration screen.



Button assignments may be changed as required.



Press and release the lower inching control to lower the hitch a small increment. Press and hold the control to slowly lower the hitch as long as the control is held.



Press and release the raise inching control to raise the hitch a small increment. Press and hold the control to slowly raise the hitch as long as the control is held.

NOTE: The inching controls only function when the tractor is stationary.

The LED in each button:

- is normally off when the hitch is enabled but not in use,
- is red if the hitch is disabled by the hydraulic lockout switch,
- and is green whenever its hitch valve is active.

Four Wheel Drive (4WD) / Mechanical Front Drive (MFD) controls



Press the manual button to manually engage or disengage MFD.

The LED on the button confirms the active mode. The MFD icon on the instrument cluster indicates its current state.

Press and release the Auto MFD button to enable automatic MFD operation.


The LED on the button confirms the active mode. The MFD icon on the instrument cluster indicates its current state.



Press and hold the Auto button to access its setup screen on the display.

Select the rear hitch position on the display in order to disengage the auto 4WD.

The LED is flashing when 4WD is temporarily disengaged.

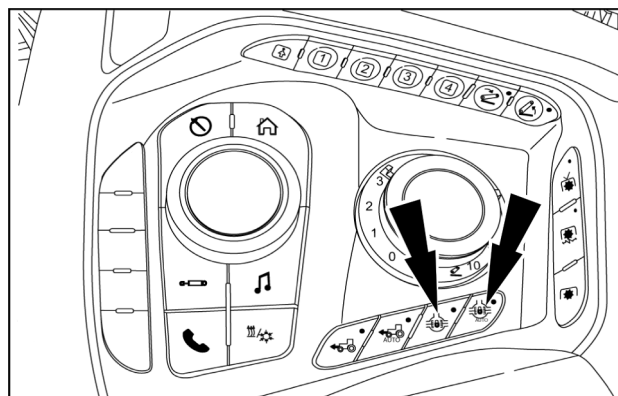

SVIL23TR01471PA 2

Thereafter, Auto MFD engagement is determined by:

- ground speed,
- and the steering engagement zone selected with the display screen.

When a MFD mode is active, pressing the other mode button does not turn MFD off. The other mode is enabled.

Differential lock controls



Press the manual button to manually engage or disengage differential lock.

The LED on the button confirms the active mode. The differential lock icon on the instrument cluster indicates its current state.

Press and release the Auto differential lock button to enable automatic differential lock operation.



The LED on the button confirms the active mode. The differential lock icon on the instrument cluster indicates its current state.

Press and hold the Auto button to access its setup screen on the display.

Select the rear hitch position on the display in order to disengage the auto differential lock.


The LED is flashing when differential lock is temporarily disengaged.

Thereafter, auto differential lock engagement is determined by:

- brake application,
- ground speed,
- and the steering engagement zone selected with the display screen.


When a differential lock mode is active, pressing the other mode button does not turn differential lock off. The other mode is enabled.

When a differential lock mode is active, pressing the other mode button does not turn differential lock off. The other mode is enabled.

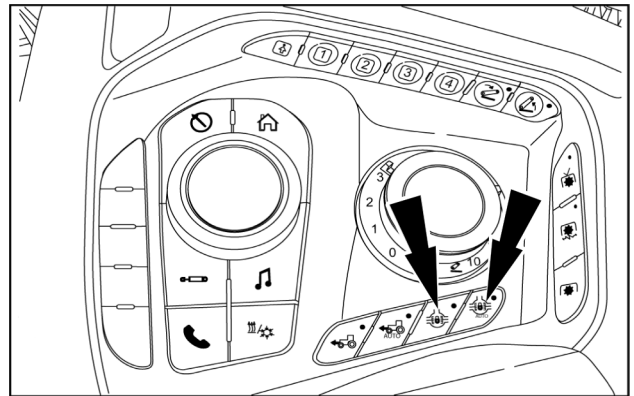

SVIL23TR01471PA 3

Headliner console

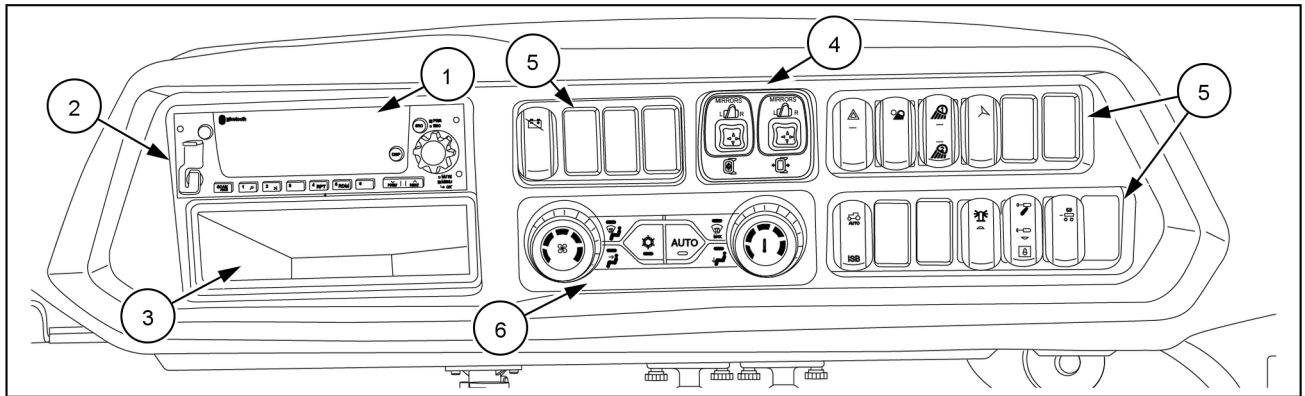

SVIL20TR01502EB 1


The headliner console contains:

- the DAB radio (1) and USB input port (2),
- a small storage compartment (3),
- the power mirror controls (4),
- and three control pads for standard or optional switches (5),
- the cab climate control pad (6)

DAB Radio

Some cab options now offer an enhanced radio which features:

- Auxiliary input (for MP3 players, iphones, android phones, etc),
- USB input.
- Bluetooth pairing capability,

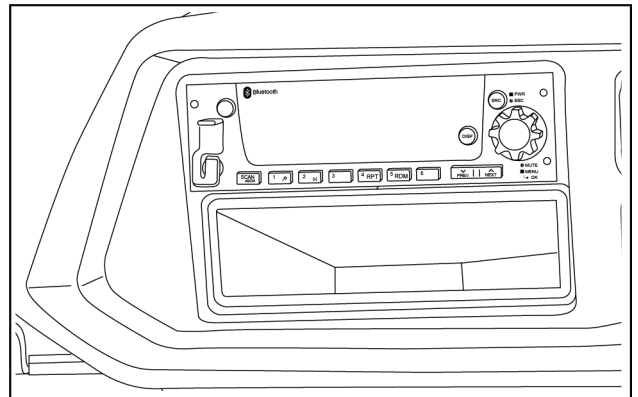


SVIL20TR02012AA 2

For instructions on using any of the radio features, refer to radio manual included with your other tractor printed manuals.

The microphone (1) for the Bluetooth radio, where fitted, is located in the cab headliner slightly in front of the operator's position.

The radio works with the key switch in the off or accessory position.

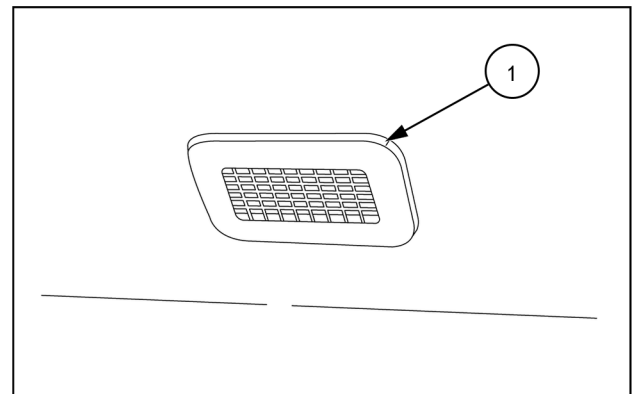

RAIL19TR01115AA 3

Power mirrors (where fitted)

 
Tilt controls



Use the three-position L-R control **(1)** to select the left-hand or right-hand upper mirror for adjusting. The center position is the off position.


Use the four-position control **(2)** to adjust the vertical and/or horizontal tilt of the selected upper mirror.

Mirror extend/retract controls



Use the three-position L-R control **(1)** to select the left-hand or right-hand upper mirror for adjusting. The center position is the off position.


Use the lower control **(2)** to retract or extend the mirror assembly.

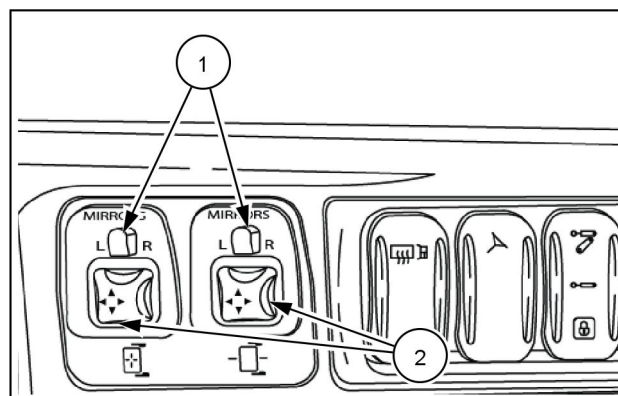

SVIL21TR00332AA 4


Wake-up disable switch

 The Wake-up disable switch toggles the automatic battery isolator function on/off. See page **Battery isolator functionality (55.302)** for more information.



Depress the top of the Wake-up disable switch to prevent the battery from being re-connected automatically.

Depress the bottom of the Wake-up disable switch to allow the battery to be reconnected automatically.

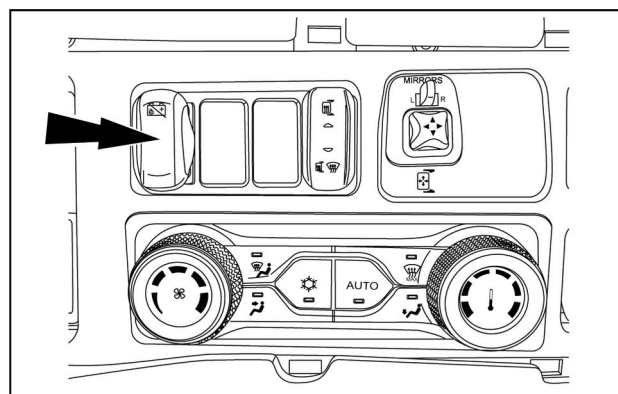


SVIL20TR01839AA 5

Mirror/rear window defrost switch (where fitted)



Press the top of the switch to toggle the defrosters for the power mirrors and the rear window on or off. A green lamp on the switch illuminates when the switch is on.

Settings on the display HVAC screen offer further controls for these functions.

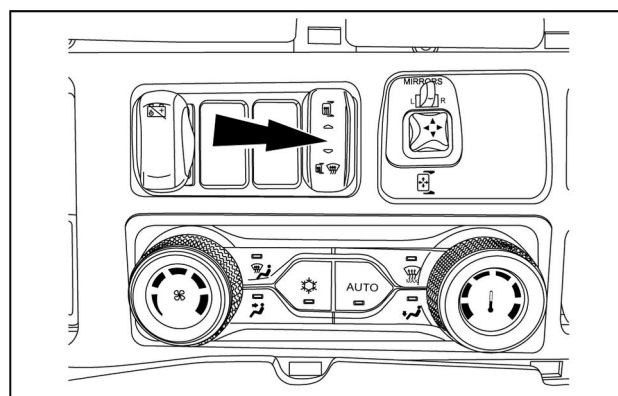

SVIL20TR01839AA 6

Advanced steering system field/road switch (where fitted)

⚠ WARNING

Loss of control!

Always make sure that the Field/Road switch is set to Road mode while operating the vehicle on public roads. Do not engage autoguidance while operating the vehicle on public roads.

Failure to comply could result in death or serious injury.

W1588A




Press the top of the switch for field mode:

- to enable all autoguidance functions,
- to enable all advanced steering systems.

Press the bottom of the switch for road mode:

- to disable all autoguidance functions,
- to disable all advanced steering systems while driving on public roads.

NOTE: Always switch to road mode and disable autoguidance functions before driving on public roads. This prevents accidental engagement of any autoguidance functions.

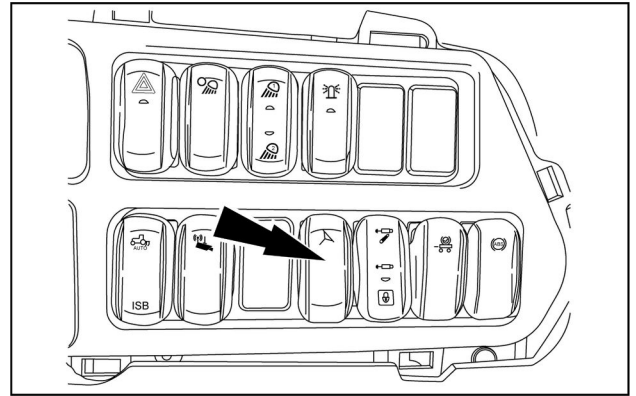

SVIL20TR01837AA 7

Hydraulic master switch

⚠ WARNING

Moving parts!

Always use the Hydraulic Master switch to disable the hitch and remote valve controls before roading.

Failure to comply could result in death or serious injury.

W1587A

⚠ WARNING

Misuse hazard!

Always use the hydraulic master switch to disable the front hitch. A Drop Rate Setting of 0% is not intended to be a safety lock mechanism.

Failure to comply could result in death or serious injury.

W1792A

⚠ WARNING

Misuse hazard!

Always use the Hydraulic Master switch to disable the rear hitch. A Drop Rate Setting of 0% is not intended to be a safety lock mechanism.

Failure to comply could result in death or serious injury.

W1603A

⚠ WARNING

Unexpected machine movement!

Always use the machine's locking devices to prevent any unintentional movements of the machine (mounted or towed) or parts of it that may occur while roading or servicing (unfold, swing out, or other). Read and follow all related instructions in the manual provided by the machine manufacturer.

Failure to comply could result in death or serious injury.

W1789A

Use the roading switch to prevent unintended movement of hitch-mounted or remote valve-driven implements when working or traveling. When locked, the switch locks the hitch and remote valve controls and prevents the operator from accidentally lowering the implement.

NOTE: Hitch ride control, if enabled, remains active when the roading lock is active.



Press the top of the switch to unlock the hitch and remote valve controls.




Move the switch to the middle position to unlock the remote valve controls, but not the hitch controls.



Press the bottom of the switch to lock the hitch and remote valve controls.

A green lamp on the switch illuminates when the hitch or the hitch/remote valves are unlocked.

The lamps on the rear hitch inching buttons reflect the status of the hitch: red when locked and green when unlocked.

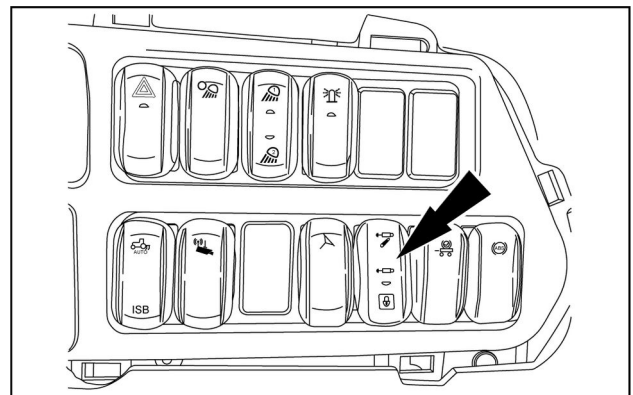

SVIL20TR01837AA 8


ISOBUS switch (where fitted)



Press the top of the switch to enable tractor's functions control from an ISOBUS implement.

ISB

Press the bottom of the switch to disable implement actions, if the implement supports the ISB feature.

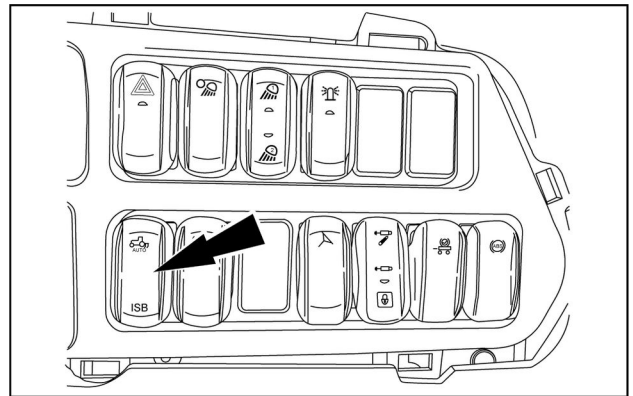

SVIL20TR01837AA 9

Trailer brake test switch (where fitted)



Use the trailer brake release switch to determine whether the tractor park brake and trailer brakes can hold the tractor/trailer stationary as equipped.

To perform this test proceed as follows:


1. Stop the combination on an up or down incline.
2. Keep the engine "ON".
3. Engage the parking brake of the tractor.
4. Check the stability of the braked combination. Only continue this test if the combination is in a safe condition.
5. Stay seated on the operator's seat.
6. Do not depress the brake pedals during this test. Depress and hold the trailer brake release switch to momentarily disconnect the trailer's brake performance from the tractor.

The test stops after **10 s** even if the switch is being depressed. The trailer brake re-engages and the warning symbols disappears.

If the combination does not move and stays in a safe condition, the tractor's parking brake system alone is able to hold the combination in place. If the combination starts moving after the switch has been depressed, immediately bring the switch back into rest position. In this case, the tractor's parking brake performance is not sufficient to hold the combination and it is not permitted to park the combination at this place.

NOTICE: The tractor must remain connected to the trailer to maintain stability: the tractor parking brake may be holding part of the trailer mass. A disconnected trailer may start rolling over time damaging property and itself.

NOTICE: For long term storage on an incline, install wheel wedges on the trailer wheels.

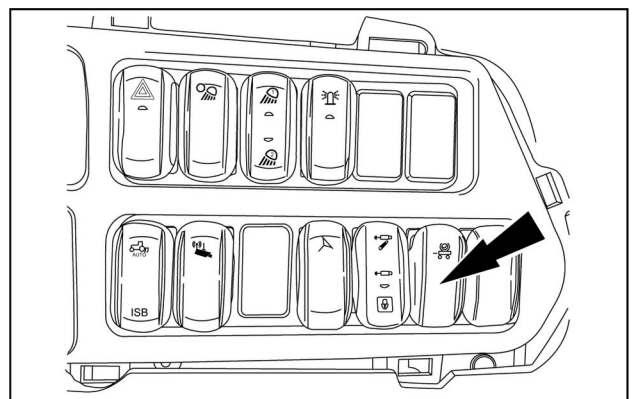


SVIL20TR01837AA 10

Work lamp master off switch



Press the top of the single position switch to turn all work lamps off.

NOTE: Refer to page **Tractor lighting (55.404)** for more information on working lamp controls and their interaction.

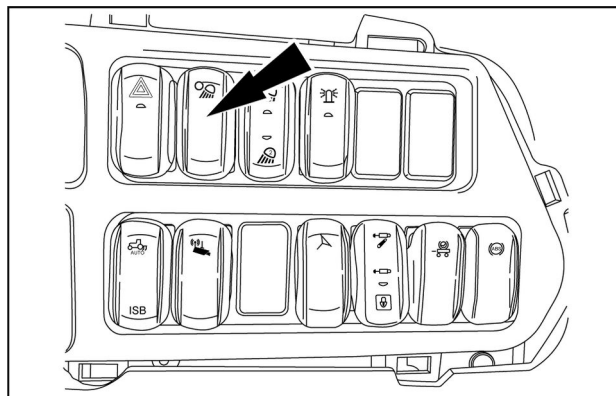

SVIL20TR01837AA 11

Work lamp (Memory 1 or Memory 2)




Press the top of the switch to turn on the work lamps associated with memory 1 on the display lighting screen.



Press the bottom of the switch to turn on the work lamps associated with memory 2 on the display lighting screen.

A separate green lamp for each memory on the switch illuminates when on.

NOTE: Refer to page **Tractor lighting (55.404)** for more information on working lamp controls and their interaction.

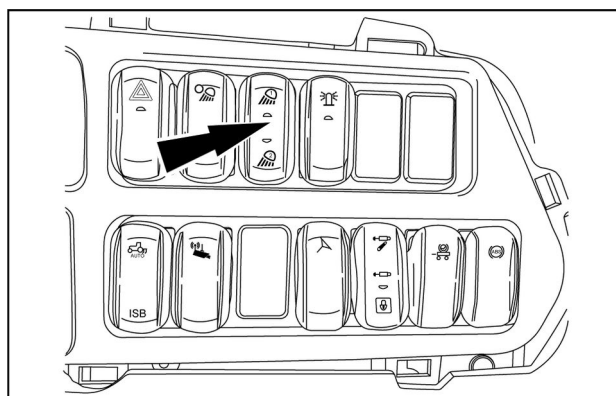

SVIL20TR01837AA 12


Hazard lamp switch



Press the top of the switch to toggle the flashing amber warning lamps on or off.

NOTE: Hazard lamps include the front position lamps, the rear fender lamps, and the optional marker arms lamps, where fitted

The hazard lamps illuminate even if the key switch and main lighting control are in the off position. A green lamp on the switch illuminates when the switch is on.

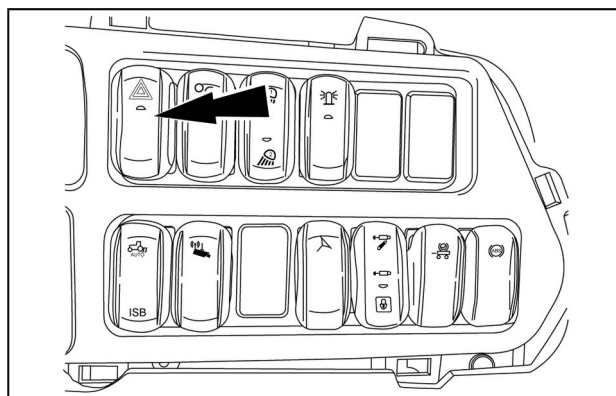


SVIL20TR01837AA 13

Beacon(s) on/off switch (where fitted)



Press the top of the switch to toggle the beacon(s) on or off. A green lamp on the switch illuminates when the switch is on.

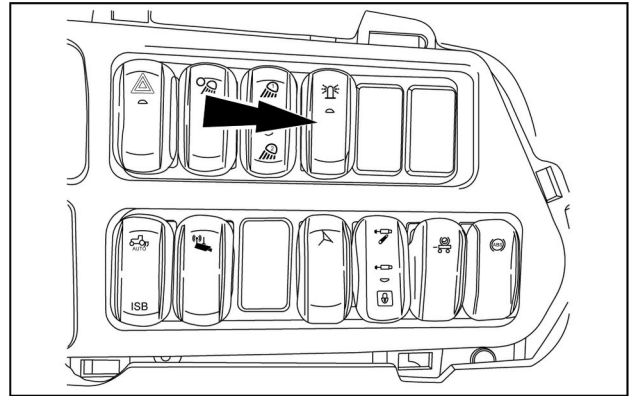


SVIL20TR01837AA 14

Wireless camera pairing (where fitted)




Press the top of the switch to switch the receiver into connection mode and pair a wireless camera. See page **Wireless camera pairing (55.530)** for more information.

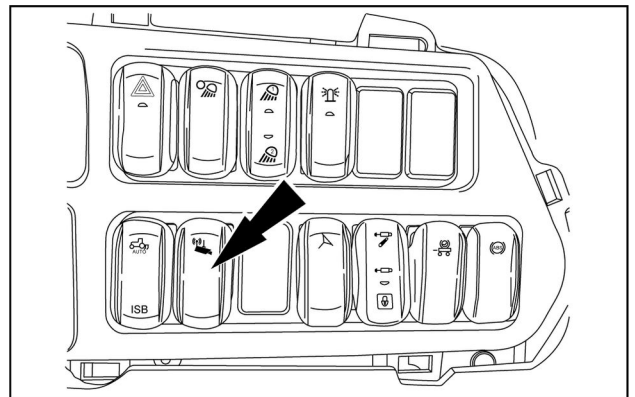

SVIL20TR01837AA 15

Cab climate controls

Refer to page **Cab climate controls (50.200)** in this chapter for complete information on the cab climate controls.

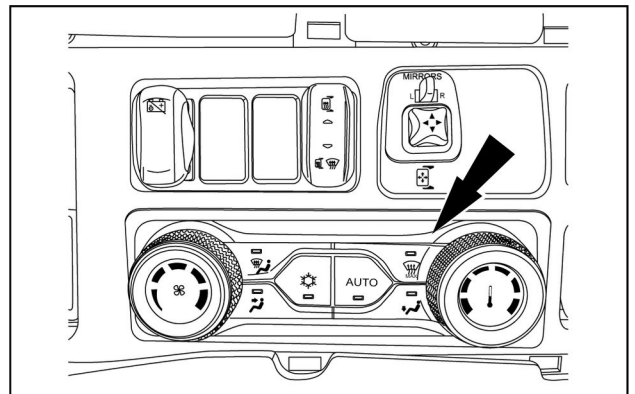

SVIL20TR01839AA 16

Rear hitch controls

⚠ WARNING


Misuse hazard!

Always use the Hydraulic Master switch to disable the rear hitch. A Drop Rate Setting of 0% is not intended to be a safety lock mechanism.

Failure to comply could result in death or serious injury.

W1603A

Navigation

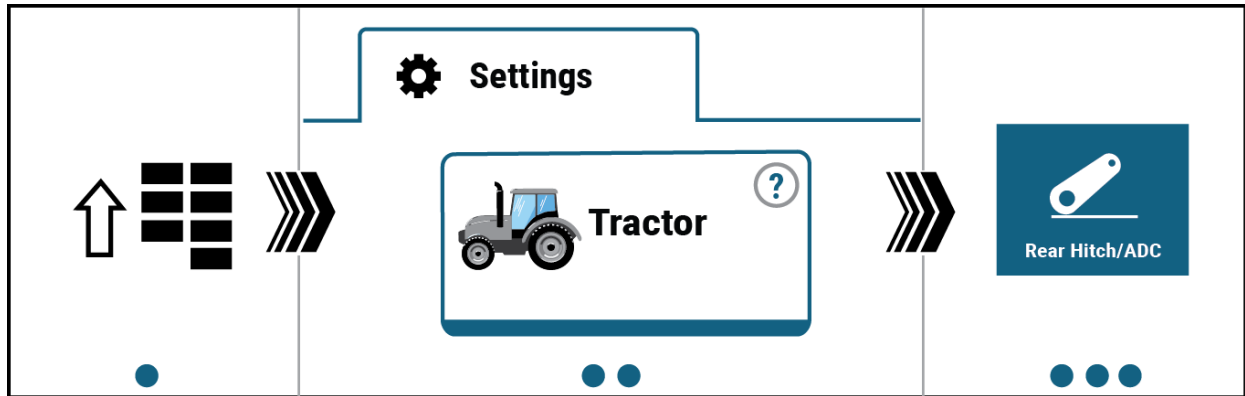

RAIL19TR00290SA 1

NOTE: Navigate to the display rear hitch settings screen or access it with the primary navigation control.

The electronic hitch system has two modes of operation: position control and draft control.

In position control, the hitch mirrors the movement of the hitch position control.

In draft control, the hitch system adjusts hitch height to maintain a constant implement draft load on the tractor in changing soil conditions and over varying terrain.


NOTE: Ride control and wheel slip are two auxiliary modes which can be active during position control or draft control.

Hitch position control(s)

The hitch position control raises or lowers the hitch to select the set point or working depth for an implement.

Rotate the position control clockwise to raise the hitch or decrease down pressure.

Rotate the position control counter clockwise to lower the hitch or increase down pressure.

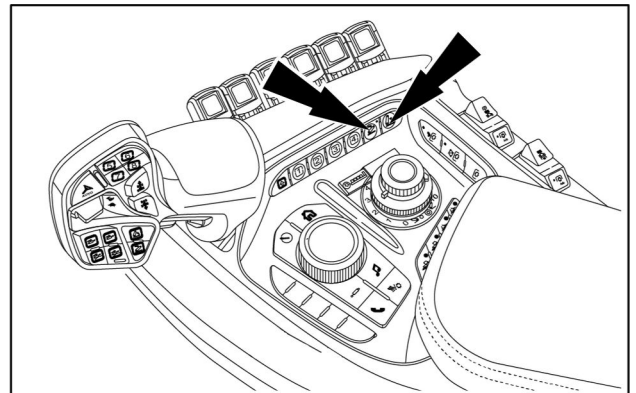

SVIL23TR01463AA 2

When equipped, the bottom control knob is for the rear hitch; the top control knob is for the front hitch.

Both controls feature an indicator (1) and a marker (2).


In position mode, the indicator represents the set point or working depth for the hitch.

The adjustable marker acts as a reference for the set point. Use the marker to return the hitch to the same set point.


The instrument cluster shows the position of each hitch as a percentage of travel as equipped.

The position control portion of the hitch display screen indicates:

- with gray lines, the selected upper limit and lower limit settings as a percentage of hitch travel,
- with the blue line, the current position of the hitch as a percentage of calibrated travel.
- with the green line, the current set point or working depth setting, selected with the position control.

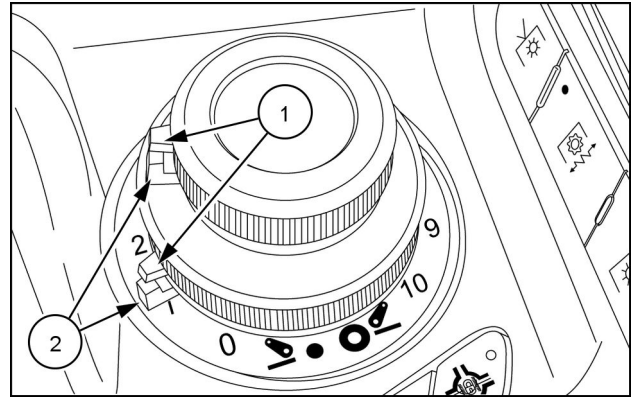

RAIL18TR01129AA 3

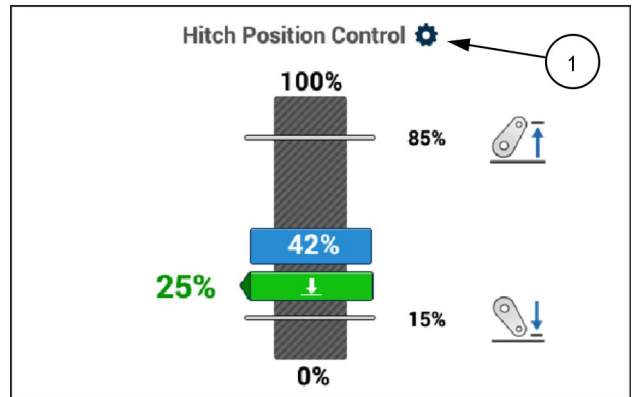

RAIL19TR02028PA 4

Hitch express buttons



Press the hitch express raise button on the multi function handle to raise the rear hitch to the upper limit (out of work height) at the current raise rate setting.




Press the hitch express lower button on the multi function handle to lower the rear hitch to the set point (working depth) at the current drop rate setting.

Press and hold the hitch express lower button for fast dig mode:



- The hitch lowers at **100%** drop rate.
- The hitch lowers until the button is released or the **0%** position is reached.
- The hitch returns to the set point when released.

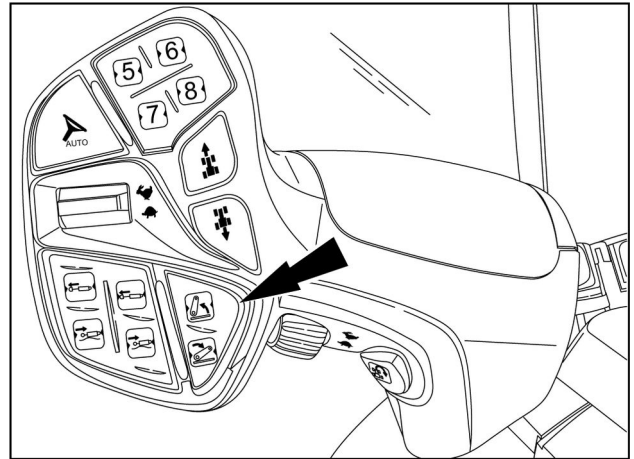

RAIL18TR00398BA 5

The slider controls on the display screen for the rear hitch can be displayed by clicking on the gear icon, (1) Figure 4. They show the current settings:



- for the upper limit, the height to which the hitch will raise when it is out of work,
- for the lower limit, the maximum depth to which the hitch can lower for this implement,
- for the raise rate, the speed at which the hitch will raise,
- for the drop rate, for the speed at which the hitch will drop.

The settings can be changed with the slider controls on the display or the hitch setting controls under the armrest cover.

If the lower button is pressed while the hitch is raising, the hitch will lower. If the raise button is pressed while the hitch is lowering, the hitch will raise.

If the raise button is pressed while the hitch is raising, the hitch will stop. If the lower button is pressed while the hitch is lowering, the hitch will stop. Press the desired button again to continue hitch travel to the upper limit or set point.

Once the hitch is set to the required working position, use the buttons to raise and lower the hitch without affecting the draft or position control settings.

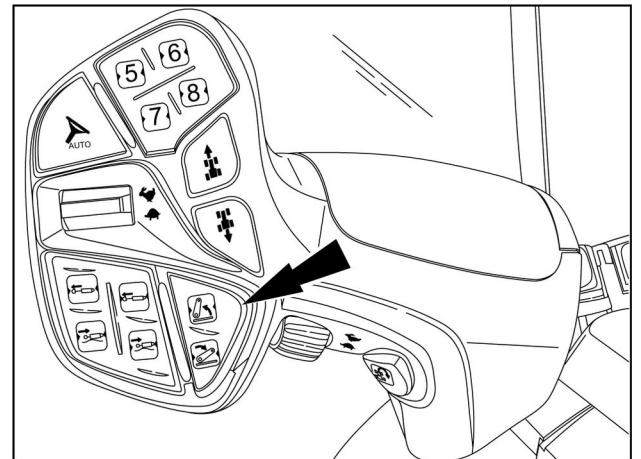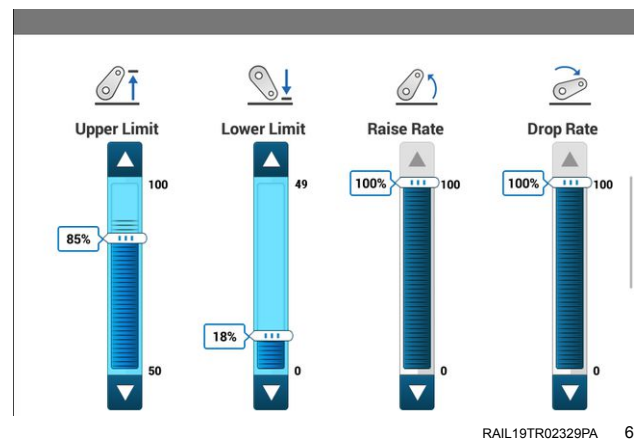

Rear hitch inching controls


Use the rear hitch inching controls to connect an implement to the tractor. The inching range is bounded by the upper and lower limit settings. The inching controls only function when the tractor is stationary.



Press and release the lower inching control to lower the hitch a small increment. Press and hold the control to slowly lower the hitch as long as the control is held.



Press and release the raise inching control to raise the hitch a small increment. Press and hold the control to slowly raise the hitch as long as the control is held.

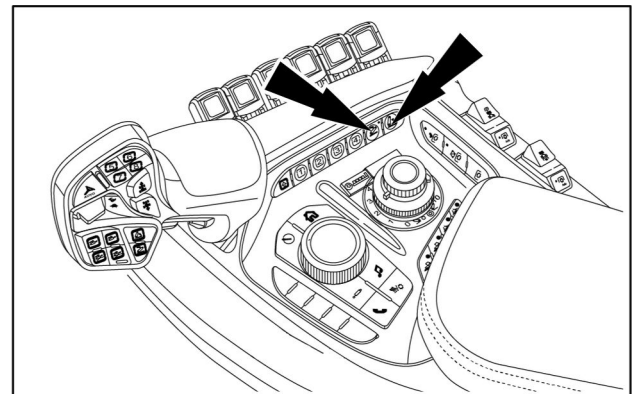


The LED in each button:

- is normally off when the hitch is enabled but not in use,
- is red if the hitch is disabled by the roading switch,
- and is green whenever its hitch valve is active.

Rear hitch setting controls

Raise the cover on the armrest compartment to access the hitch setting controls.


Press the hitch adjusting control knob to toggle between the front and rear hitch.

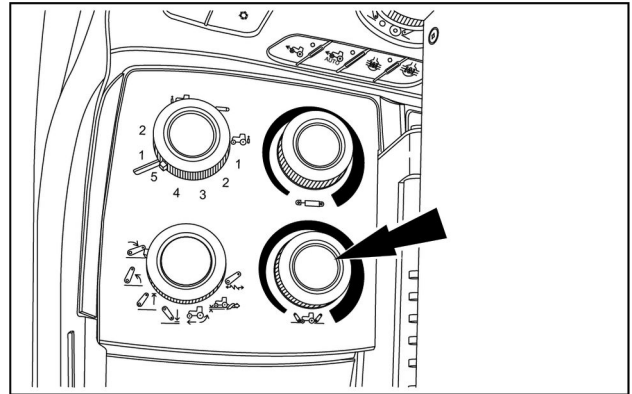

SVIL21TR00017AB 9

Rotate the control knob clockwise to increase a setting value. Rotate the control knob counter clockwise to decrease a setting value.

A settings screen displays briefly to confirm the change whenever a value is adjusted.

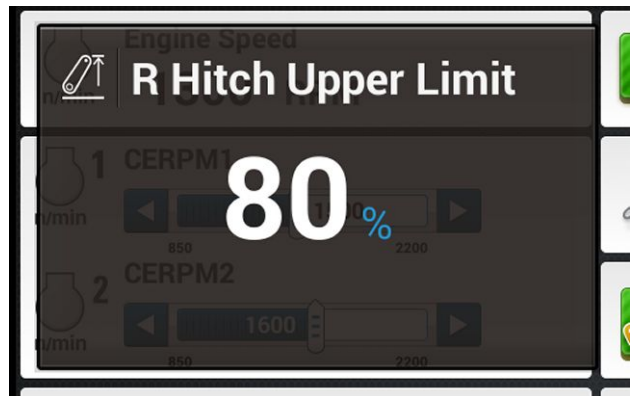

RAIL19TR00004PA 10

Rotate the hitch setting control knob to the relevant icon for the setting. Then use the adjusting control to select a new value.



Hitch drop rate. The drop rate setting adjusts the speed at which the hitch drops when lowering. Available range is **0 – 100%**



Hitch raise rate. The raise rate setting adjusts the speed at which the hitch raises. Available range is **0 – 100%**.



Hitch upper limit. The upper limit setting adjusts the out of work height for the hitch. Available range is **50 – 100%**.



Hitch lower limit. The lower limit adjusts the maximum depth to which an implement can be lowered. Available range is **0 – 49%**.




Wheel slip limit. The slip limit setting picks the percentage at which the hitch raises the implement until wheel slip returns to the set limit. Available range is **5 – 40%**.



Draft load setting. The draft load setting adjusts the load on the tractor by controlling implement depth. Available range is **1 – 100%**.




Sensitivity. The sensitivity setting applies to the draft and wheel slip systems. The setting determines how quickly the systems respond to draft load and wheel slip changes. Available range is **1 – 100%**.

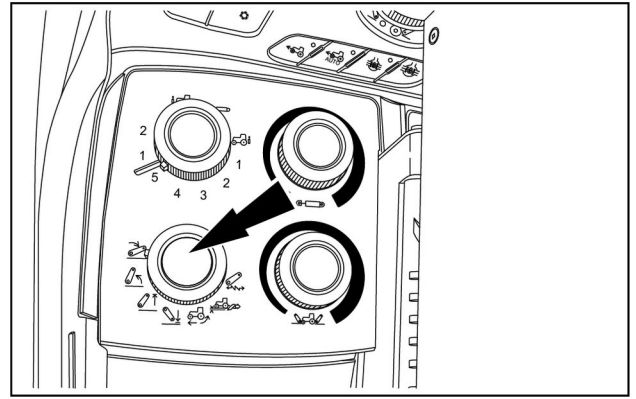

SVIL21TR00017AB 11

The reporting window below the position/draft control content indicates:

- the current raise rate,
- the current drop rate,
- the current slip limit setting,
- and the current wheel slip.

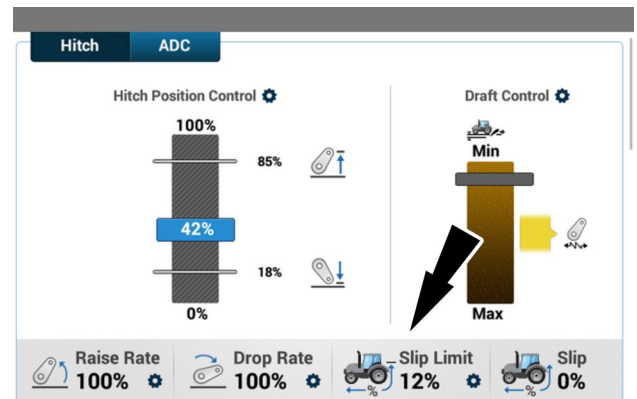

RAIL19TR02022PA 12

Roading

⚠ WARNING

Moving parts!

Always use the Hydraulic Master switch to disable the hitch and remote valve controls before roading.

Failure to comply could result in death or serious injury.

W1587A

⚠ WARNING

Unexpected machine movement!


Always use the machine's locking devices to prevent any unintentional movements of the machine (mounted or towed) or parts of it that may occur while roading or servicing (unfold, swing out, or other). Read and follow all related instructions in the manual provided by the machine manufacturer.

Failure to comply could result in death or serious injury.

W1789A

Always fully raise the hitch for road transport.

Use the Hydraulic master switch in the headliner to lock the hitch and remote valves during road transport.

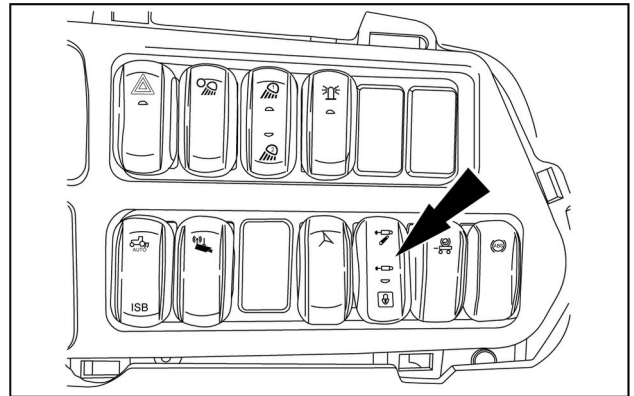

SVIL20TR01837AA 13

Front hitch operation

⚠ WARNING


Misuse hazard!

Always use the hydraulic master switch to disable the front hitch. A Drop Rate Setting of 0% is not intended to be a safety lock mechanism.

Failure to comply could result in death or serious injury.

W1792A

Navigation

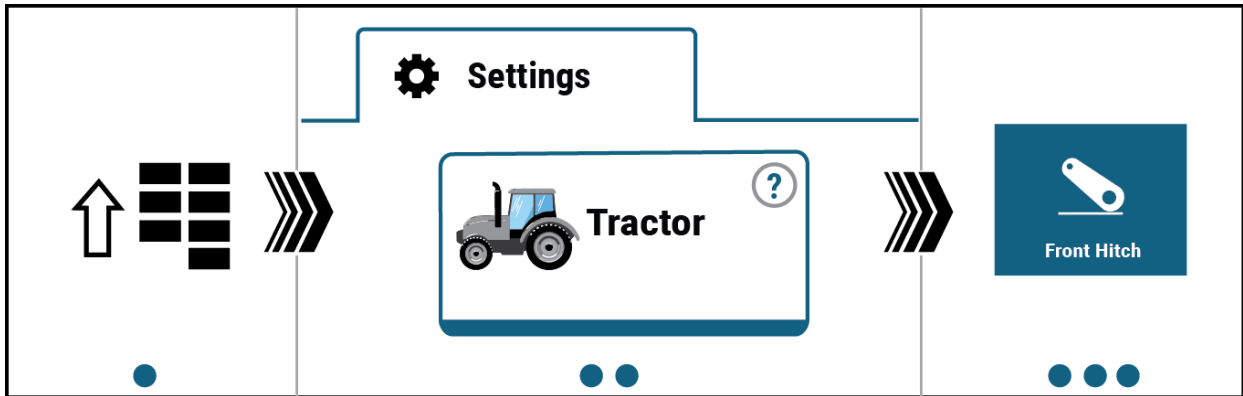

NOTE: Navigate to the display front hitch settings screen.

The front hitch system works in position control mode only and requires either a front or rear remote valve.

In position control, the hitch mirrors the movement of the front hitch position control.


NOTE: Draft control, ride control and slip limit control are not available for the front hitch system.

Hitch position control (where fitted)

The front hitch position control raises or lowers the front hitch to select the set point or working depth for an implement.

Rotate the position control clockwise to raise the hitch.

Rotate the position control counter clockwise to lower the hitch.

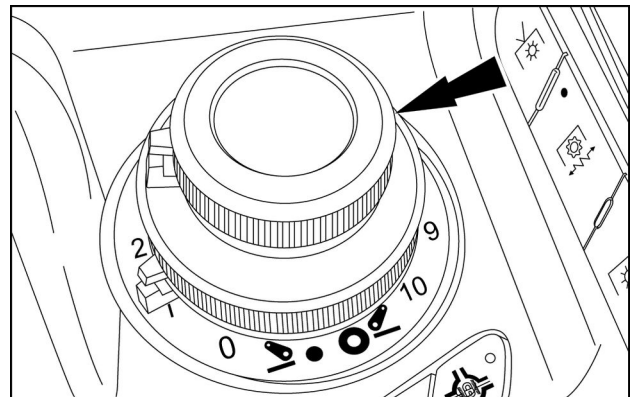


The control features an indicator **(1)** and a marker **(2)**.

In position mode, the indicator represents the set point or working depth for the hitch.

The adjustable marker acts as a reference for the set point. Use the marker to return the hitch to the same set point.

The instrument cluster shows the position of the front hitch as a percentage of travel as equipped.

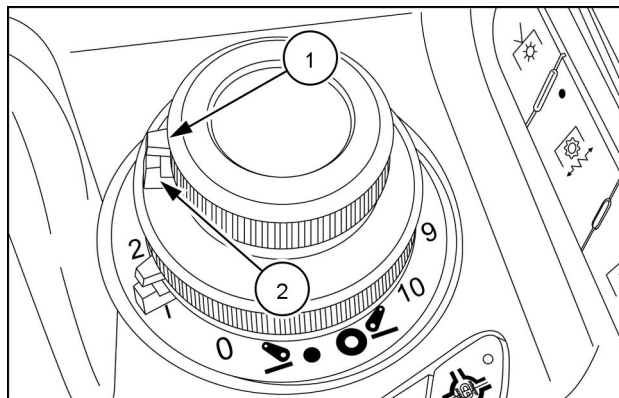


RAIL18TR01129AA 3

The hitch display screen indicates:

- with the upper gray line **(1)**, the selected upper limit (out of work height) as a percentage of hitch travel,
- with the lower gray line **(2)**, the maximum depth to which the implement can be lowered,
- with the blue line **(3)**, the current position of the hitch as a percentage of calibrated travel,
- with the green line **(4)**, the current set point or working depth setting, selected with the position control.

The User Defined Window for front hitch position control can be placed on a Run screen.

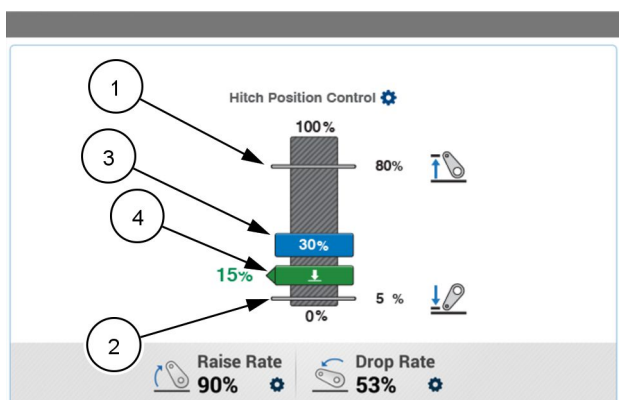

RAIL19TR02328PA 4

Hitch express buttons


Use the second function button **(1)** with the hitch express raise and lower buttons **(2)** on the multi function handle to command the front hitch.




Press the hitch express raise button, while holding the second function button, to raise the front hitch to the upper limit (out of work height) at the current raise rate setting.



Press the hitch express lower button, while holding the second function button, to lower the front hitch to the set point (working depth) at the current drop rate setting.

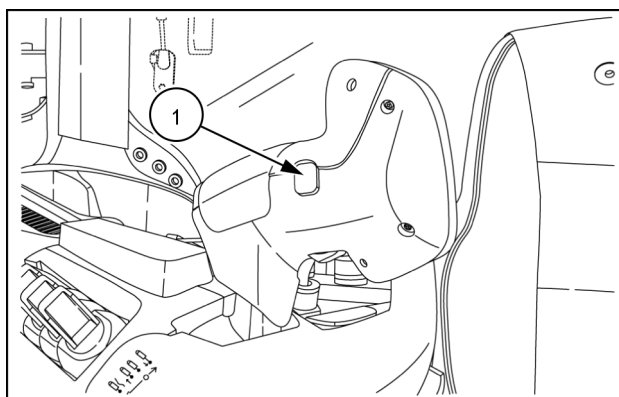

SVIL23TR00872AA 5

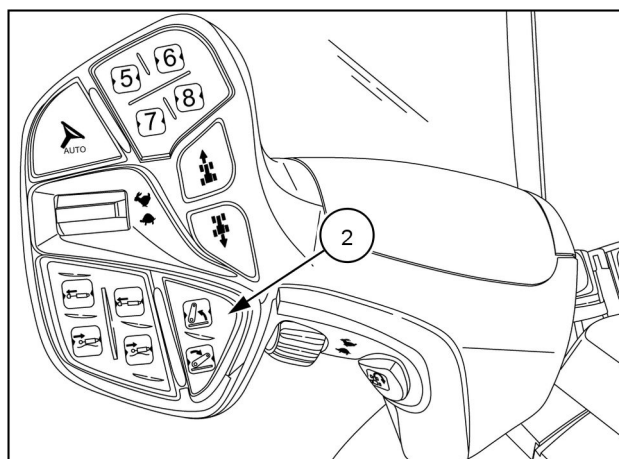


RAIL18TR00398BA 6

Use the front hitch inching controls, located on the left-hand side of the front hitch, to make small adjustments to hitch position. The inching range is bounded by the upper and lower limit settings. The inching controls only function when the tractor is stationary.

Press and release the lower inching control to lower the hitch a small increment. Press and hold the control to slowly lower the hitch as long as the control is held.

Press and release the raise inching control to raise the hitch a small increment. Press and hold the control to slowly raise the hitch as long as the control is held.

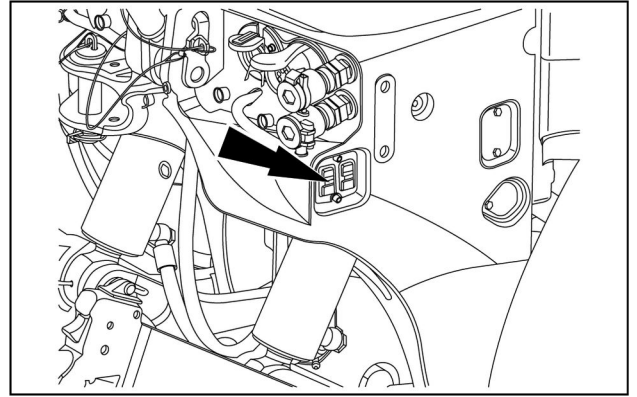


SVIL22TR01720AA 7

The slider controls on the display screen for the front hitch show the current settings:

- for the upper limit, the height to which the hitch will raise when it is out of work,
- for the lower limit, the maximum depth to which the hitch can lower for this implement,
- for the raise rate, the speed at which the hitch will raise,
- for the drop rate, for the speed at which the hitch will drop.

The settings can be changed with the slider controls on the display or the hitch setting controls under the armrest cover.

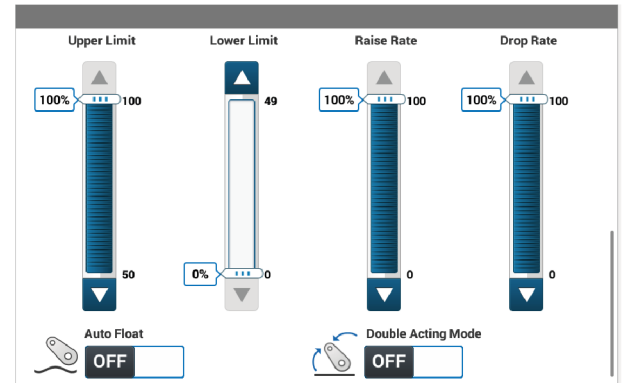

SVIL22TR02763AA 8


Front hitch setting controls

Raise the cover on the armrest compartment to access the hitch setting controls.

Press the hitch adjusting control knob to select the front hitch.

Rotate the control knob clockwise to increase a setting value. Rotate the control knob counter clockwise to decrease a setting value.

A settings screen displays briefly to confirm the change whenever a value is adjusted.

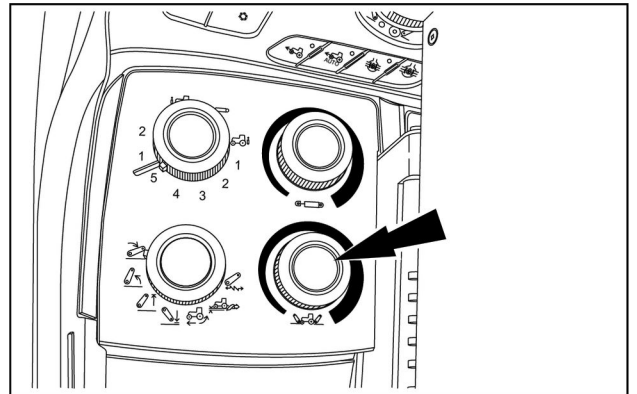

SVIL21TR00017AB 9

Rotate the hitch setting control knob to the relevant icon for the setting. Then use the adjusting control to select a new value.



Hitch drop rate. The drop rate setting adjusts the speed at which the hitch drops when lowering. Available range is **0 – 100%**



Hitch raise rate. The raise rate setting adjusts the speed at which the hitch raises. Available range is **0 – 100%**.




Hitch upper limit. The upper limit setting adjusts the out of work height for the hitch. Available range is **50 – 100%**.




Hitch lower limit. The lower limit adjusts the maximum depth to which an implement can be lowered. Available range is **0 – 49%**.

The reporting window below the position control content indicates:

- the current raise rate,
- and the current drop rate.

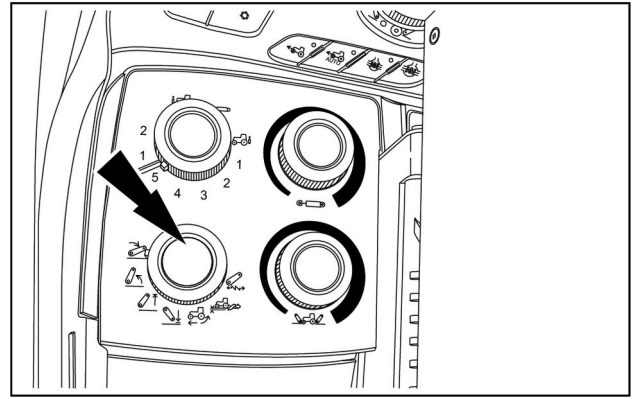

SVIL21TR00017AB 10

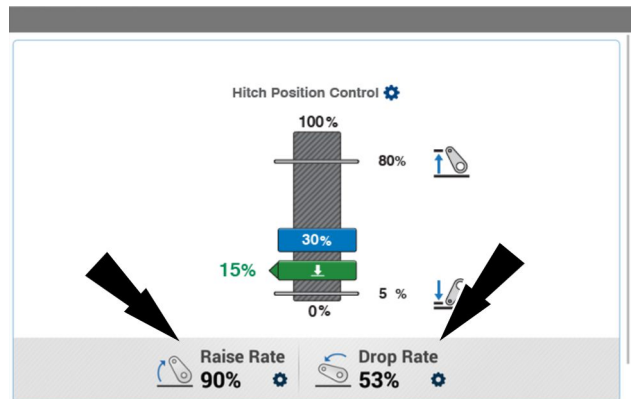

RAIL19TR02328PA 11


Setting the Hitch Operating Mode (where fitted)

NOTE: Only switch between single-acting and double acting mode when the FHPL is in the upper lifted position.

To switch from the single acting mode to the double acting mode, toggle the slider to ON. To revert back to single acting mode, toggle to slider to OFF.

When in Single acting mode, the front hitch is raised hydraulically but lowered using the weight of the implement.

When in Double Acting mode, the front hitch is raised and lowered hydraulically. Operating in this mode will provide additional penetration for ground engaging equipment in hard soil conditions or when using a front mounted scraper blade.

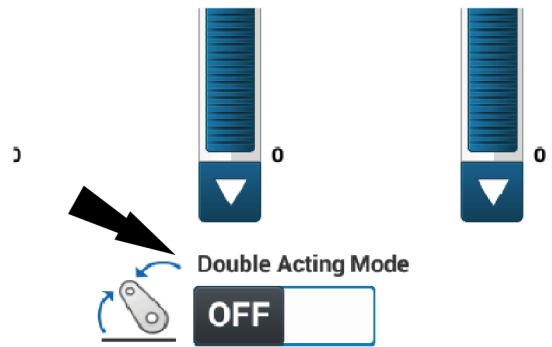

SVIL22TR02764AA 12

Auto Float Mode (where fitted)

The front hitch uses the float feature of the front or rear remote valve which powers it to offer Auto Float mode for the front hitch.


When Auto Float is enabled:

- the front hitch automatically enters float mode when lowered to within **2%** of its set point (working depth) with the express lower button,
- the front hitch moves up and down freely (within its mechanical limitations) to follow the ground contour.

Auto Float is toggled on/off with the control on the setting screen for the front hitch on the display.

The Auto Float icon displays on the instrument cluster whenever the mode is active.

Auto Float is disabled when the mode is toggled off with the display button or if the front hitch position is adjusted with any other control (other than the express raise and lower buttons).

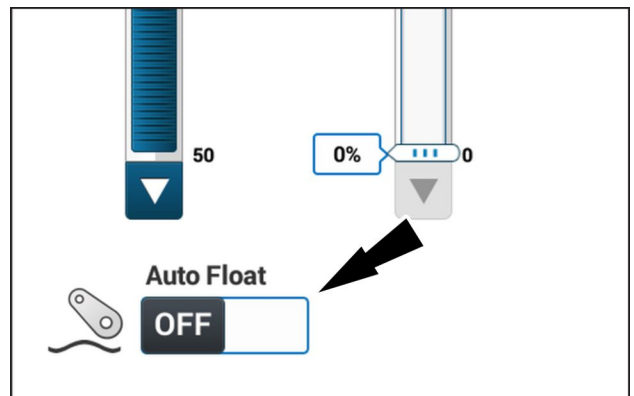

RAIL19TR02336PA 13



SVIL23TR00893PA 14

Roading

⚠ WARNING

Moving parts!

Always use the Hydraulic Master switch to disable the hitch and remote valve controls before roading.

Failure to comply could result in death or serious injury.

W1587A

⚠ WARNING

Unexpected machine movement!


Always use the machine's locking devices to prevent any unintentional movements of the machine (mounted or towed) or parts of it that may occur while roading or servicing (unfold, swing out, or other). Read and follow all related instructions in the manual provided by the machine manufacturer.

Failure to comply could result in death or serious injury.

W1789A

Always fully raise the hitch for road transport.

Use the Hydraulic master switch in the headliner to lock the hitch and remote valves during road transport.

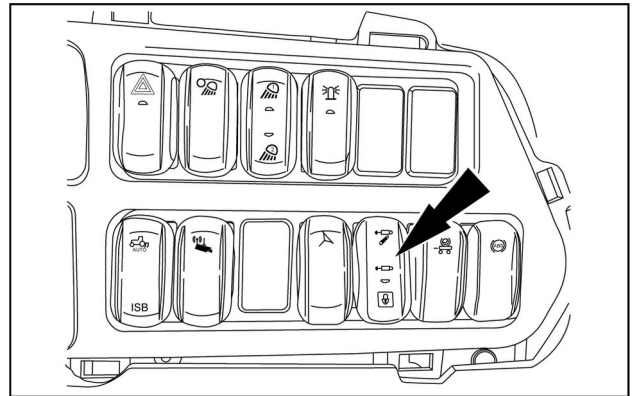

SVIL20TR01837AA 15

Hydraulic master switch

⚠ WARNING

Moving parts!

Always use the Hydraulic Master switch to disable the hitch and remote valve controls before roading.

Failure to comply could result in death or serious injury.

W1587A

⚠ WARNING

Misuse hazard!

Always use the hydraulic master switch to disable the front hitch. A Drop Rate Setting of 0% is not intended to be a safety lock mechanism. Failure to comply could result in death or serious injury.

W1792A

When travelling between fields or on the highway, both the hitch and remote valve controls should be disabled.

Use the hydraulic master switch to prevent unintended movement of hitch-mounted or remote valve-driven implements. When locked, the switch locks the hitch and remote valve controls and prevents the operator from accidentally lowering the implement.

NOTE: Hitch ride control, if enabled, remains active when the roading lock is active.



Press the top of the switch to unlock the hitch and remote valve controls.



Move the switch to the middle position to unlock the remote valve controls, but not the hitch controls.



Press the bottom of the switch to lock the hitch and remote valve controls.

A green lamp on the switch illuminates when the hitch or the hitch/remotes are unlocked.

The lamps on the rear hitch inching buttons reflect the status of the hitch: red when locked and green when unlocked.

⚠ WARNING

Unexpected machine movement!

Always use the machine's locking devices to prevent any unintentional movements of the machine (mounted or towed) or parts of it that may occur while roading or servicing (unfold, swing out, or other). Read and follow all related instructions in the manual provided by the machine manufacturer.

Failure to comply could result in death or serious injury.


W1789A

⚠ WARNING

Misuse hazard!

Always use the Hydraulic Master switch to disable the rear hitch. A Drop Rate Setting of 0% is not intended to be a safety lock mechanism. Failure to comply could result in death or serious injury.

W1603A

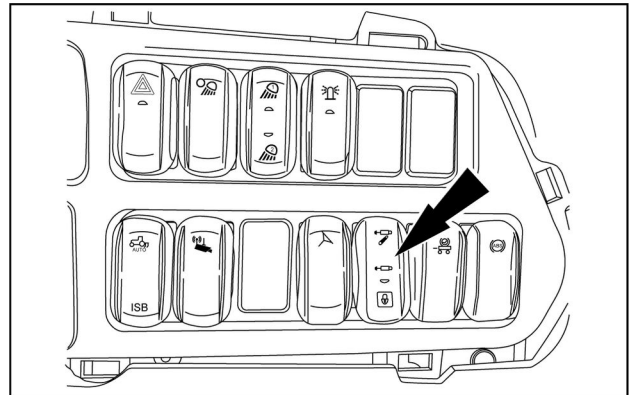

SVIL20TR01837AA 1

This maintenance step below is required **EVERY 750 HOURS OR EVERY 2 YEARS**.

Check the handbrake

The handbrake should be checked and adjusted by your authorized dealer as the procedures require the removal of some components.