Maintenance planning

Maintenance chart

Change fluid				Drain fluid								
Replace					Cleaning							
Check							Α	djust				
Grease								Test				
Maintenance action								Page no.				
Break-in period												
Grease points (Bucket)	Х							6-16				
Cab protection (ROPS and FOPS)		Х						6-16				
Tightening torques		Х						6-16				
Track shoe bolt torque		Х						6-16				
Hydraulic oil return filter		>	(6-16				
Pilot line filter		>	<	ı				6-16				
Swing reduction unit oil			Х					6-16				
Travel reduction units oil			х					6-16				
Every 10 hours												
Engine oil level		Х						6-17				
Engine coolant level	П	Х		ı				6-18				
Hydraulic oil level		Х						6-19				
Fuel tank				Х	(6-20				
Fuel filters		Ī		х	(6-21				
Every 50 ho	urs	;										
Air conditioner filters				T	х			6-22				
Every 250 ho	our	s										
Grease points (Bucket)	Х			T				6-24				
Swing reduction unit oil		Х		T				6-25				
Travel reduction units oil		х		T				6-26				
Engine primary air filter	Ħ			T	х			6-27				
Batteries		Х		T				6-30				
Fan and alternator drive belt				Ī		Х		6-33				
Hydraulic oil tank				Х	(6-34				
Tightening torques	П	Х						6-35				
Track shoe bolt torque	П	Х		Ī				6-36				
Track rollers and idler wheels	П	х						6-37				
Cab protection (ROPS and FOPS)		Х						6-37				
Every 500 hours												
Turntable bearing	х			T				6-38				
Engine oil and filter		Ī	х					6-41				
Fuel pre-filter		>	۲	T				6-43				
Fuel filter		×	(T				6-44				
Radiator and coolers				T	х			6-45				
Every 1000 h	oui	rs .										
Grease points (Boom and arm)	Х	T	T	Ī	T			6-46				
Hydraulic tank breather filter		>	(T	T			6-49				
Engine air filters	Ħ	X	_	Ť	T	П		6-50				
Hydraulic fluid analysis	П	Х	1	t	T	П		6-53				
Swing reduction unit oil	Ħ		Х	T	\dagger	Ħ		6-54				
Alternator	Ħ	Х	T	t	\dagger			6-56				
Starter motor		X	T	t	\dagger	П		6-56				
Every 2000 hours												
Travel reduction units oil	T	Ť	х	T	T			6-57				
Hydraulic oil suction filter	Ħ	\dagger	Ť	T	Х	Г		6-58				
Hydraulic oil return filter	H	>	(t	Ť	П		6-59				
Try and and on Total Trinton	Ш					1						

Change fluid_						Drain fluid				
Rep	Replace					Cleaning				
Check							Α	djust		
Grease								Test		
Maintenance action								Page no.		
Pilot line filter			Χ					6-60		
Air conditioner filters			Χ					6-61		
Swing reduction gear	Х							6-61		
DEF/AdBlue® supply module filter			Χ					6-62		
Every 4000 hours										
Engine coolant				X				6-63		
DEF/AdBlue® tank sock filter			X					6-67		
Pump outlet hoses		Χ						6-71		
Hydraulic hoses		Χ						6-71		
Every 4500 hours										
After Treatment System		Χ						6-72		
Exhaust Gas Recirculation (EGR) system		Χ						6-72		
Every 5000 hours										
Hydraulic oil and filters				X				6-73		
When necessary										
Fuel feed pump					Х			6-76		
Track tension		Χ						6-77		
Fuel tank strainer					Х			6-80		
Engine oil analisys							Χ	6-80		
Gas spring inspection		Χ						6-81		
Bulb replacement			X					6-82		
Bucket teeth		Ш	Χ					6-85		
Cylinders		Χ						6-87		
Plastic and resin parts					Х			6-87		
Air-conditioning system		X						6-88		
DEF/AdBlue® tank drain				Х	(6-90		