## Maintenance planning

## **Maintenance chart**

Change fluid					Drain fluid								
Replace						Cleaning							
Check							T	est					
Grease													
Maintenance action								Page no.					
Break-in period													
Grease points (Bucket)	Х							6-15					
Cab protection (ROPS and FOPS)		X						6-15					
Tightening torques		X						6-15					
Track shoe bolt torque		X						6-15					
Hydraulic oil return filter		, ,	X					6-15					
Pilot line filter		, ,	X					6-15					
Swing reduction unit oil			×	<				6-15					
Travel reduction units oil			>	(				6-15					
Every 10 hours													
Engine oil level		Х						6-16					
Engine coolant level		Х		T	Ī	T		6-17					
Hydraulic oil level		Х		Ī	T	Ť	T	6-18					
Fuel tank				)	X	T		6-19					
Every 50 ho	urs	3											
Air conditioner filters				T	)	(		6-20					
Every 250 ho	our	s											
Grease points (Bucket)	Х			T	T	T		6-22					
Swing reduction unit oil		Х				Ť		6-23					
Travel reduction units oil		х			T	T		6-24					
Engine primary air filter		П		T	)	(		6-25					
Batteries		х		T	T	T		6-28					
Hydraulic oil tank				)	x	Ť		6-31					
Tightening torques		х				T		6-32					
Track shoe bolt torque		х				Ť		6-33					
Track rollers and idler wheels		Х			T	T		6-34					
Cab protection (ROPS and FOPS)		х		T	T	T		6-34					
Every 500 ho	our	s											
Turntable bearing	Х	Ť	Т	T	Τ	Т	Т	6-35					
Radiator and coolers	П		1		)	(	1	6-38					
Every 1000 hours													
Engine oil and filter		Ī	X	(	Τ	T	T	6-39					
Fuel pre-filter			х	1	t	$\dagger$	1	6-41					
Fuel filter		_	х	T	t	$\dagger$	1	6-42					
DEF/AdBlue® tank vent filter			X		T	Ť		6-43					
Booms, dippers, and buckets - Grease (Boom and arm)	х	T		T	T	T	T	6-44					
Hydraulic tank breather filter	П	)	Х	T	T	T	T	6-47					
Engine air filters	П	_	X	t	T	$\dagger$	t	6-48					
Hydraulic fluid analysis	H	X	+	$\dagger$	$\dagger$	$\dagger$	t	6-51					
Swing reduction unit oil			>	(	+	+	t	6-52					
Alternator		Х	ť	+	+	+	t	6-54					
Starter motor	H	Х	+	t	$\dagger$	$\dagger$	+	6-54					
Every 1500 h	_			_		_							
Blow-by filter		-	х	T	T	T	T	6-55					
Engine belts			x	+	+	+	+	6-57					
Every 2000 h	LII OU		^\	_	_								
Travel reduction units oil	Ju	13	>	,	Т	Т	T	6-58					
Traver reduction units on				`				U-UU					

Change fluid					Drain fluid					
Replace						C	le	aning		
Check							Test			
Grease										
Maintenance action								Page no.		
Hydraulic oil suction filter					Х			6-59		
Hydraulic oil return filter		)	K					6-60		
Pilot line filter		)	K					6-61		
Air conditioner filters		)	K					6-62		
Engine valve rocker clearance adjustment		X						6-62		
Every 4000 hours										
Engine coolant			)	X				6-63		
Diesel Exhaust Fluid (DEF)/AdBlue® tank suction filter -					Х			6-67		
Cleaning										
DEF/AdBlue® supply module filter		)	Κ					6-69		
Pump outlet hoses		X						6-70		
Hydraulic hoses		Х						6-70		
Every 5000 hours										
Hydraulic oil and filters			)	X				6-71		
When necessary										
Track tension		Х						6-74		
Fuel tank strainer					Х			6-77		
Engine oil analisys						Х		6-77		
Gas spring inspection		Х						6-78		
Bulb replacement		)	K					6-79		
Bucket teeth		)	K					6-82		
Cylinders		Х						6-84		
Plastic and resin parts					Х			6-84		
Air-conditioning system		X						6-85		
DEF/AdBlue® tank drain				X	(			6-87		